
M1040

10.4" Intel® Atom™ N450
Mobile Clinical Assistant

User's Manual

Version 1.1

This page is intentionally left blank.

Contents

Copyright Notice.....	i
Declaration of Conformity	i
About This User's Manual	iii
Technical Support	iii
Important Safety Instructions.....	iv
Classification	v
Disposing of Your Old Product	v
General Cleaning Tips.....	vi
Introducing the Rechargeable Battery Pack.....	vii
Symbols Description.....	viii
Warranty	ix
Chapter 1 - General Information.....	1
1.1 Introduction	2
1.2 Packing List	3
1.3 Ordering Information	3
1.4 Specifications	4
1.5 Power Information.....	5
1.6 Dimensions.....	6
1.7 Barcode Types.....	7
Chapter 2 - Installation and Configuration.....	9
2.1 Getting Started	10
2.1.1 Locating Controls and Connecting Ports.....	11
2.1.2 Replacing the External Battery.....	15
2.1.3 Installation.....	17
2.1.4 Introducing the M1040 Docking Station	22
2.1.5 Installing the M1040 on the Docking Station	26
2.1.6 Removing the M1040 from the Docking Station	28
2.1.7 Charging via the Docking Station	29
2.1.8 Connecting with the Peripheral Devices	30
2.1.9 VESA Wall-mounting (75 x 75).....	34
2.1.10 Install Hand Strap	35
2.1.11 Introducing the M1040 Desktop Cradle	37
2.1.12 Installing the M1040 on the Desktop Cradle ...	41
2.1.13 Charging via the Desktop Cradle	43
2.1.14 Connecting with the Peripheral Devices	44

2.1.15 Periodic Cleaning & Disinfection	48
2.1.16 Periodic Maintenance	49
2.2 Driver Installation.....	50
2.2.1 Chipset Driver Installation	50
2.2.2 VGA Graphics Driver Installation	53
2.2.3 Audio Driver Installation	56
2.2.4 LAN Driver Installation	58
2.2.5 RFID Driver Installation	61
2.2.6 COM Driver Installation	63
2.2.7 Bluetooth Driver Installation.....	64
2.2.8 Wireless LAN Driver Installation	67
2.2.9 FunctionKey Installation	73
2.2.10 Smart Card Reader Driver Installation.....	78
2.2.11 Resistive (Touchscreen) Driver Installation	79
2.2.12 Digitizer Driver Installation	82
2.3 Touch Screen Calibration	83
2.4 Tablet Properties	86
2.5 Function Key Configuration.....	89
2.6 Gesture Setting	92
2.7 RFID.....	94
Chapter 3 - BIOS.....	98
3.1 BIOS Main Setup	99
3.2 Advanced Settings.....	101
3.2.1 CPU Configuration.....	102
3.2.2 IDE Configuration	103
3.2.3 ACPI Settings	104
3.2.4 PCI Express Configuration	108
3.2.5 Trusted Computing.....	109
3.2.6 USB Configuration.....	110
3.3 Boot Settings.....	112
3.3.1 Boot Settings Configuration	113
3.3.2 Boot Device Priority	114
3.4 Security	116
3.5 Chipset Settings.....	117
3.5.1 North Bridge Chipset Configuration	118
3.5.2 South Bridge Chipset Configuration	119
3.6 Exit Options	121

Copyright Notice

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve the reliability, design and function. It does not represent a commitment on the part of the manufacturer.

Under no circumstances will the manufacturer be liable for any direct, indirect, special, incidental, or consequential damages arising from the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Declaration of Conformity

CE

The CE symbol on your product indicates that it is in compliance with the directives of the Union European (EU). A Certificate of Compliance is available by contacting Technical Support.

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from ARBOR. Please contact your local supplier for ordering information.

FCC Class B

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IEC 60601-1/EN60601-1/EN60601-1-2

This product complies with the system standard IEC 60601-1 Medical Electrical Equipment Part 1: General Requirements for Safety. And therefore, the product is exclusively interconnected with IEC 60601-1 certified equipment in the patient environment.

Equipment connected to the analog or digital interfaces of the unit must comply with the respective IEC standards (e.g. IEC 60601-1 for medical equipment). Furthermore all configurations shall comply with the current version of the standard for SYSTEMS IEC 60601-1-1. Everybody who connects additional equipment to the signal input part or signal output part configures a medical system, and is therefore responsible that the system complies with current version of the requirements of the system standard IEC 60601-1-1. If in doubt, consult the technical service department or your local representative.

RoHS

ARBOR Technology Corp. certifies that all components in its products are in compliance and conform to the European Union's Restriction of Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC.

The above mentioned directive was published on 2/13/2003. The main purpose of the directive is to prohibit the use of lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE) in electrical and electronic products. Member states of the EU are to enforce by 7/1/2006.

ARBOR Technology Corp. hereby states that the listed products do not contain unintentional additions of lead, mercury, hex chrome, PBB or PBDB that exceed a maximum concentration value of 0.1% by weight or for cadmium exceed 0.01% by weight, per homogenous material. Homogenous material is defined as a substance or mixture of substances with uniform composition (such as solders, resins, plating, etc.). Lead-free solder is used for all terminations (Sn(96-96.5%), Ag(3.0-3.5%) and Cu(0.5%)).

SVHC / REACH

To minimize the environmental impact and take more responsibility to the earth we live, Arbor hereby confirms all products comply with the restriction of SVHC (Substances of Very High Concern) in (EC) 1907/2006 (REACH --Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union. All substances listed in SVHC < 0.1 % by weight (1000 ppm).

About This User's Manual

This user's manual provides general information and installation instructions about the product. This User's Manual is intended for experienced users and integrators with hardware knowledge of personal computers. If you are not sure about any description in this booklet. Please consult your vendor before further handling.

Technical Support

All ARBOR products are built to the most accurate specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new equipment is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation. Your satisfaction is our primary concern. We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult this manual first. If you still cannot find the answer, gather all the information or questions that apply to your problem, and with the product close at hand, call your dealer. Our dealers are well trained and ready to give you the support you need to get the most from your products. In fact, most problems reported are minor and are able to be easily solved over the phone. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products. Please do not hesitate to call or e-mail us at:

<http://www.arbor.com.tw>
E-mail: info@arbor.com.tw

Contact Information

Add: 10F., No.700, Zhongzheng Rd., Zhonghe Dist., New Taipei City
235, Taiwan
TEL: 886-2-8226-9396

Important Safety Instructions

Read these safety instructions carefully:

1. Read all cautions and warnings on the equipment.
2. Place this equipment on a reliable surface when installing. Dropping it or letting it fall may cause damage.
3. Make sure the correct voltage is connected to the equipment.
4. For pluggable equipment, the socket outlet should be near the equipment and should be easily accessible.
5. Keep this equipment away from humidity.
6. Disconnect this equipment from the A/C outlet before cleaning it. Use a moist cloth. Do not use liquid or sprayed detergent for cleaning.
7. To fully disengage the power to the unit, please disconnect the power from the AC outlet.
8. Do not scratch or rub the screen with a hard object.
9. Never use any of the solvents, such as Thinner Spray-type cleaner, Wax, Benzene, Abrasive cleaner, Acid or Alkaline solvent, on the Medical Display. Harsh chemicals may cause damage to the cabinet and the touch sensor.
10. Remove dirt with a lightly moistened cloth and a mild solvent detergent. Then wipe the cabinet with a soft dry cloth.
11. The openings on the enclosure are for air convection and protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
12. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
13. If the equipment will not be used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
14. Never pour any liquid into openings. This may cause fire or electrical shock.
15. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
16. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped or damaged.
 - f. The equipment has obvious signs of breakage.

-
17. The sound pressure level at the operator's position, according to IEC 704-1:1982, is no more than 70dB(A).
 18. Keep this User's Manual for later reference.
 19. DO NOT LEAVE THIS EQUIPMENT IN AN UNCONTROLLED ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS MAY DAMAGE THE EQUIPMENT.



UL Class II Classification: With respect to electric shock, fire and mechanical hazards only, in accordance with UL-60601-1 and CAN/CSA C22.2 No. 601.1.

Classification

- Powered by Class II power supply
- No applied part
- Degree of protection against the ingress of water: IPX0
- Mode of operation: Continuous
- The equipment is not suitable for use in the presence of a flammable anesthetic mixture with air or nitrous oxide: Not AP or APG Category.

Disposing of Your Old Product

- **Within the European Union**



EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste.

This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product, or if applicable, follow any agreements made between yourself. The mark on electrical and electronic products only applies to the current European Union Member States.

- **Outside the European Union**

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.

General Cleaning Tips

You may need the following precautions before you begin to clean the device. When you clean any single part or component for the device, please thoroughly read and understand the details below.

1. We strongly recommended that you should shut down the system before you start to clean any single components.
2. When you need to clean the device, please rub it with a piece of dry cloth.
3. Be cautious of the tiny removable components when you use a vacuum cleaner to absorb the dirt on the floor.
4. Never drop the components inside the device or get circuit board damp or wet.
5. Be cautious of all kinds of cleaning solvents or chemicals when you use it for the sake of cleaning. Some individuals may be allergic to the ingredients.
6. Try not to put any food, drink or cigarette around the device.

Cleaning Tools:

Although many companies have created products to help improve the process of cleaning your devices and peripherals, users can also use household items to clean their devices and peripherals. Below is a listing of items you may need or want to use while cleaning your devices or peripherals. Keep in mind that some components in your device may only be able to be cleaned using a product designed for cleaning that component, if this is the case it will be mentioned in the cleaning.

- Cloth: A piece of cloth is the best tool to use when rubbing up a component. Although paper towels or tissues can be used on most hardware as well, we still recommend you to rub it with a piece of cloth.
- Water or rubbing alcohol: You may moisten a piece of cloth a bit with some water or rubbing alcohol and rub it on the device. Unknown solvents may be harmful to the plastics parts.
- Vacuum cleaner: Absorb the dust, dirt, hair, cigarette particles, and other particles out of the device can be one of the best cleaning methods. Over time, these items can restrict the airflow in a device and cause circuitry to corrode.
- Cotton swabs: Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas in your keyboard, mouse, and other locations.

-
- **Foam swabs:** Whenever possible, it is better to use lint-free swabs such as foam swabs.

We recommend you to follow the cleaning steps:

1. Close all application programs
2. Close operating software
3. Turn off power switch
4. Remove all peripherals
5. Pull out power cable

Introducing the Rechargeable Battery Pack

With very little care, you can maximize the life and lifespan of your M1040's battery. Most importantly, only use your M1040 in its ideal operating temperature (See "M1040 Specifications") – do not leave it in a hot trunk during the summer.

- **Important Terms to Understand**

"Battery life" means the time your M1040 will run before it must be recharged (sometimes this is also called "playtime" or "runtime").

"Battery lifespan" means the total amount of time your battery will last before it must be replaced.

- **Using Your M1040 for the First Time**

Be sure to fully charge (approx. 4 hours) your M1040 when you plug it in for the first time.

- **Long-Term Storage & Maintenance**

If you do not plan to use your M1040 battery for more than three months, it is recommended that you store the battery separately, fully charged, and then recharge it every three month. If you store an uncharged battery it could fall into a deep worn-out state which would render it incapable of holding any charge. Be sure to store your M1040 and battery at the proper temperature. (See "M1040 Specifications.")

- **Battery Lifespan**

The removable batteries for M1040 are designed to retain up to 80% of their original capacity after 300 charging and recharging cycles when properly maintained. You may choose to replace your battery when it no longer holds sufficient charge to meet your needs.

Symbols Description



This symbol of "CAUTION" indicates that there is a danger of injury to the user or a risk of damage to the product, should warning notices be disregarded.



Battery Recycle



UL Classified certification



Power on/off



UL Class II safety symbol



Indoor Use Only



This symbol indicates electrical warning.



Change of electric current:
Internal: positive current
External: negative current

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Vendor will not be liable for any claim made by any other related party.

Vendors disclaim all other warranties, either expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the hardware, the accompanying product's manual(s) and written materials, and any accompanying hardware. This limited warranty gives you specific legal rights.

Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

This page is intentionally left blank.



Chapter 1

General Information

1.1 Introduction

This ultra light and ultra thin medical tablet, M1040, powered by soldered onboard Intel® Atom™ N450 Processor, comes with a projected capacitive multi-touch screen that comes with a highly protective layer for the touch and compatible with Windows 7 operating system. The slip-free grip at the handle is designed for safe carriage. As an ideal clinical-convenient tablet, the M1040 features dual batteries; one internal battery and one hot-swappable external rechargeable battery that can stand long operating time at approximately 5.5 hours. Regarding mobile communication, the M1040 can easily connect to Bluetooth, WLAN and HSPA, which gives it great accessibility for eHealthcare or portable medical care. Other integrated vertical application functions include 2D Barcode Scanner, 2.0 Megapixel Camera, RFID Reader and Smart Card Reader (the Smart Card Reader is optional).

- eHealthcare and Clinical Assistant Application
- Soldered Onboard Intel® Atom™ N450 Processor
- Electromagnetic Digitizer with Resistive Touch
- EN60601-1, EN60601-1-2 certified, UL60601-1 compliant
- Dual batteries (1 x internal battery + 1 x hot-swappable external battery) w/ long battery operating time (approx. 5.5 hours)
- Slim Appearance -- Ultra-light weight (1.3Kg) and ultra thin (26 mm)
- Slip-free grip for Easy Handling
- Multiple Network Connectivity: Bluetooth, WLAN, and HSPA 3.75G
- Integrated Applications: 2D Barcode Scanner, 2 x 2.0 Megapixels Camera, RFID Reader, and SmartCard Reader (the SmartCard Reader is optional)
- Multiple I/O ports: 1 x RS-232, 1 x USB, 1 x LAN, 1 x VGA, 1 x Smart-Card Reader, 1 x Charging Bay (via the docking station)

1.2 Packing List

After opening the package, carefully inspect the contents. If any of the items is missing or appears damaged, please contact with your local dealer or distributor. The package should contain the following items:

Standard:



1 x M1040



1 x VMC-1040



1 x Hand Strap, Hand Strap L/R cover, Screws



Driver CD



User's Manual



Medical AC/DC Adapter Kit
(1 x 65W IT-standard DC power adapter)

1.3 Ordering Information

M1040	10.4" portable medical PC with vehicle-mount cradle
DTC-1040	Desktop cradle for M1040
BAT-1040	External 1880mAH 4-cell Li-battery

1.4 Specifications

System	
CPU	Intel® Atom™ N450 1.6GHz CPU w/ 667MHz FSB
Chipset	Intel® Atom™ N450 + ICH8M
Graphics	Gen3.5 + GFX Core
Memory	2GB DDR2-667 SO-DIMM memory module installed
Audio	Azalia HD IDT 92HD81 Audio
Storage	120GB 1.8" SATA HDD or 32GB 1.8" SATA SSD
Ethernet Controller	1 x Realtek 8111 PCIe Gigabit Ethernet controller
Peripherals and Devices	
USB Port	1 x USB 2.0 ports
Camera	1 x 2.0 Megapixels CMOS camera (at the front) 1 x 2.0 Megapixels CMOS camera w/ auto-focus (at the rear)
RFID	13.56MHz RFID reader with ISO 15693/14443A/14443B certifications
Wi-Fi	1 x 802.11 b/g/n Mini PCIe Wireless LAN card
GSM/UMTS	1 x Gobi 3000 HSUPA (3.75G) Module (optional)
Bluetooth	1 x Bluetooth module
Barcode Scanner	1 x 2D Barcode Scanner
Smart Card Reader	1 x Smart Card Reader (Optional)
Safety	
Regulatory	CE, FCC Class B, EN60601-1, EN60601-1-2 certified, UL60601-1 compliant
Button & Indicator	
Function Key	1 x 5-way function key
	1 x RFID on/off button
	1 x Barcode Scan trigger button
	4 x Programmable function keys (F1~F4) Default setting referring to User's Manual
LED Indicator	1 x Battery status LED


LED Indicator	1 x Bluetooth LED
	1 x WLAN/RFID on/off LED
	1 x Power on/off LED
Power Button	1 x Power on/off button
LCD Display	
Size/Type	10.4" TFT Active Metrix Panel
Max. Resolution	1024 x 768 (XGA) w/ 262, 144 colors
Luminance	340 cd/m ² (typ.)
Viewing Angle	178° (H), 178° (V)
Backlight Type	LED
Touch Screen	
Type	Digitizer with Resistive Touch
Touch Pen	Battery-free pen
Mechanical & Environment	
Operating Temperature	0 ~ 40°C (32 ~ 104°F)
Storage Temperature	-20 ~ 60°C (-4 ~ 140°F)
Dimensions (W x H x D)	256 x 267 x 26.6 mm (10.16" x 10.51" x 1.05") (without I/O door)
Weight (Net)	1.3 kg (2.8 lb) w/ batteries (internal + external)
IP Rating	IP54
Vibration	5 to 500Hz, 3G random operation (SSD)
Shock	30G peak (11m sec.)
Transit Drop	Under 3 feet (90cm)

1.5 Power Information

Power Supply	
Adapter Input	100 ~ 240 VAC (full range)
Adapter Output	20VDC, 3.25A, 65W
Battery Type	Li-battery pack
Battery Capacity	Internal 1880mAh 3-cell; External 1880mAh 4-cell
Battery Operating Time	5.5 hours (typical, w/ new battery)

1.6 Dimensions

M1040

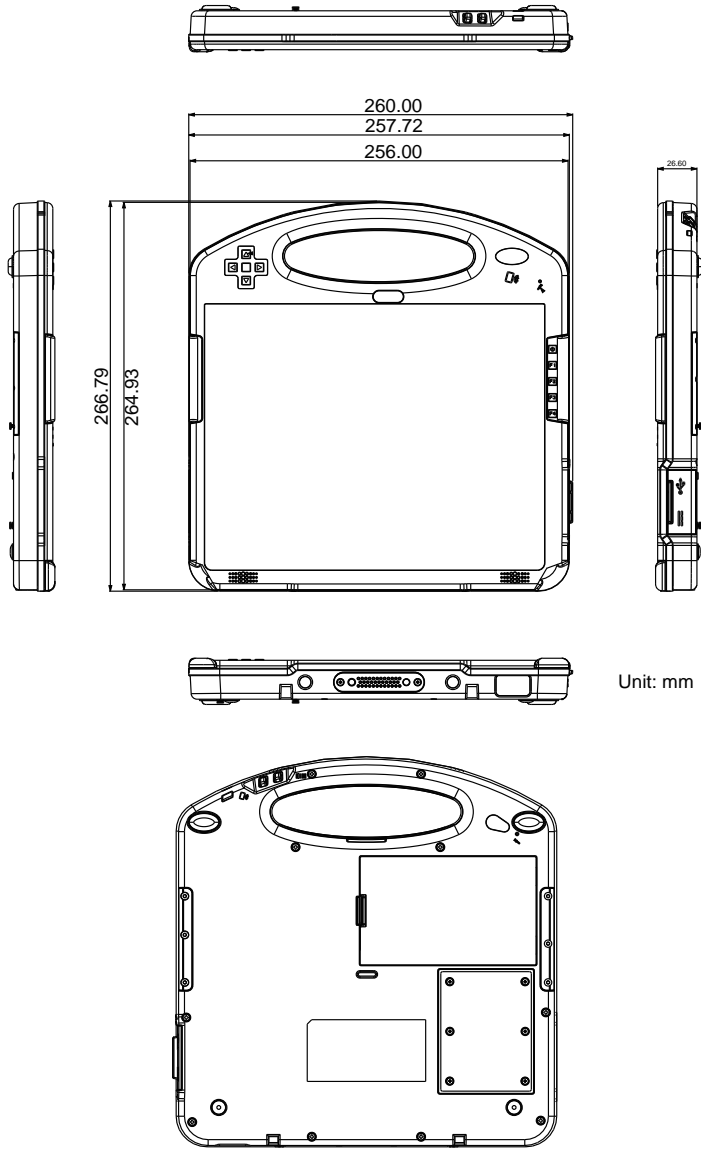

1.7 Barcode Types

As follows, M1040 Medical PC supports 1D and 2D bar codes as the format below.

PDF417



PDF417(Chinese)



QR



QR(Chinese)



DataMatrix



DataMatrix(Chinese)



Aztec



MicroPDF



This page is intentionally left blank.



Chapter 2

Installation and Configuration

2.1 Getting Started

This chapter is intended to give users the information about how to utilize the various function of the medical PC. To be familiar with using the computer, please take a few minutes to read this manual.

Before installing the operating system and driver utilities, you should prepare your own USB CD-ROM drive and the power adapter included in the accessory box. When the operating system on your computer is ready, please use the accompanying Driver CD to install the drivers and utilities for the respective devices. The following sections will guide you through the drivers and utilities installation step by step.



M1040 Medical PC



Power Adapter & Power Cord



USB CD-ROM Drive



VMC-1040 RAM-ball Mount Cradle



Driver CD




DTC-1040


2.1.1 Locating Controls and Connecting Ports

Please refer to the following images for the locations of I/O ports, function buttons and the external battery.

Front View

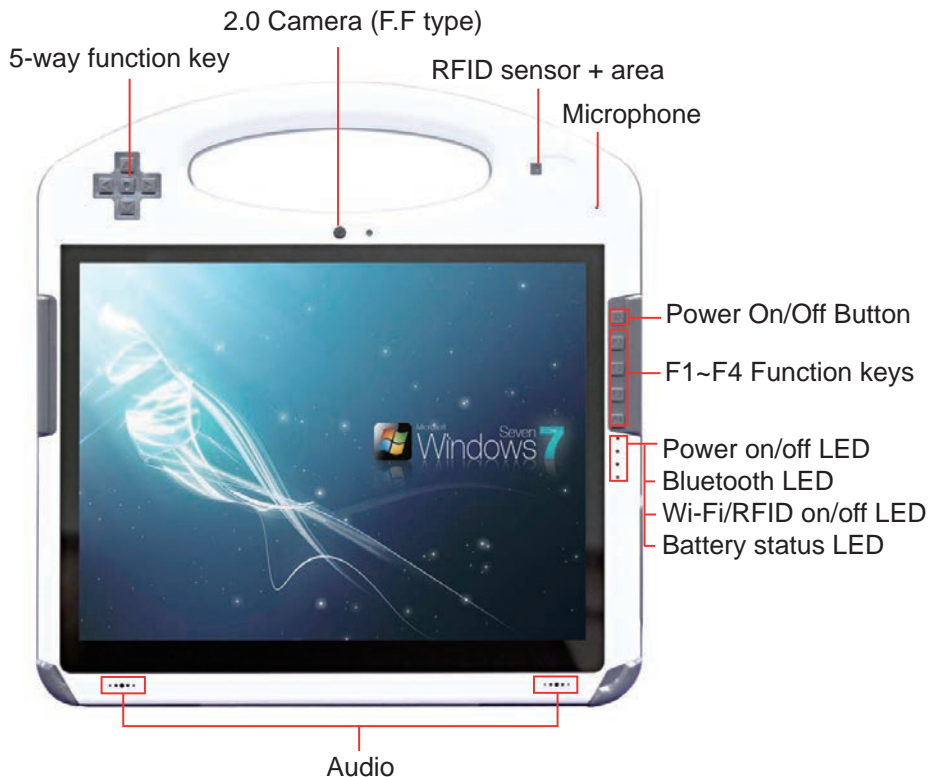


Side View

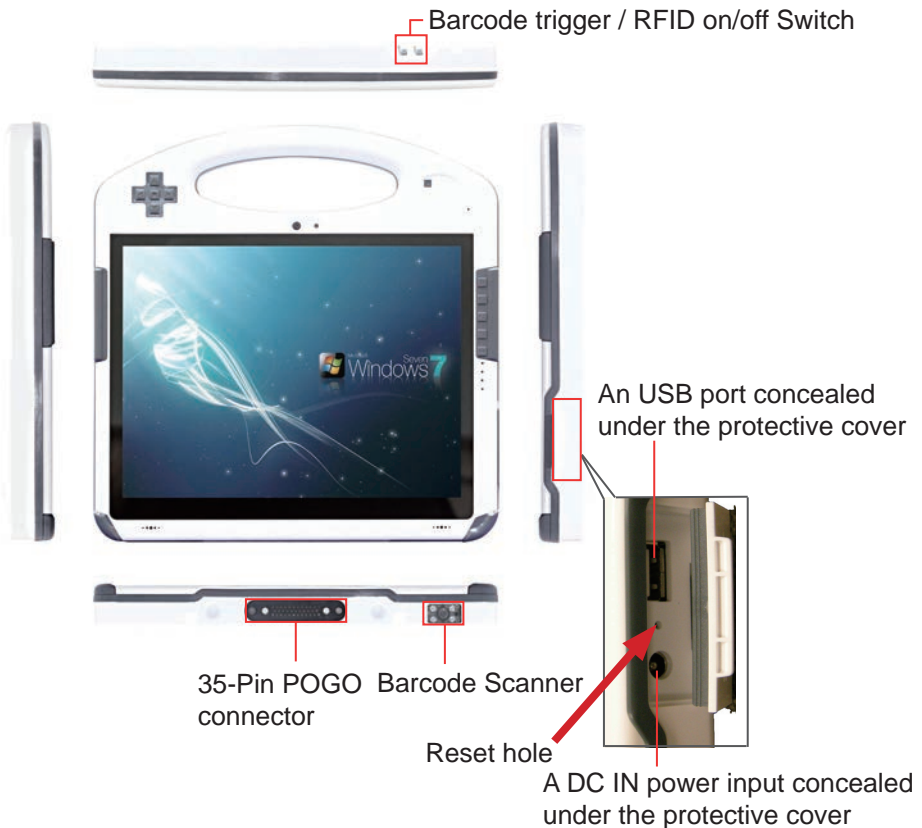


Note:

If you need to turn off the computer and cannot use the operating system shutdown procedure, use the reset switch. Insert a paper clip to press the switch. Use this method only if you have tried pressing Ctrl+Alt+Delete or holding down the power button for four to five seconds first.

Back View

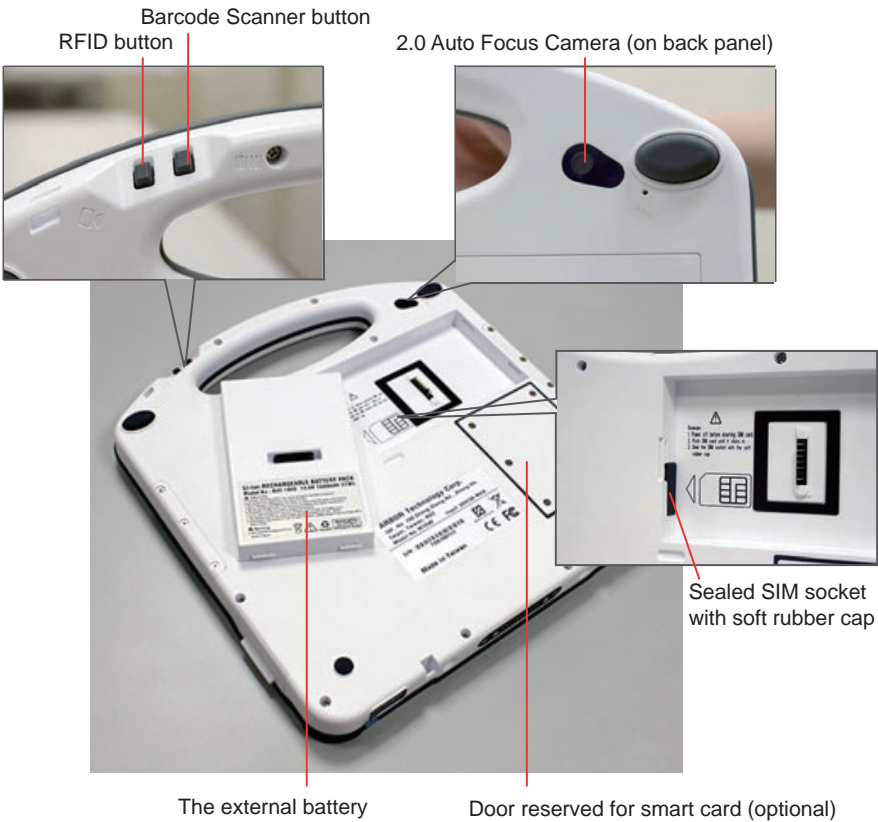

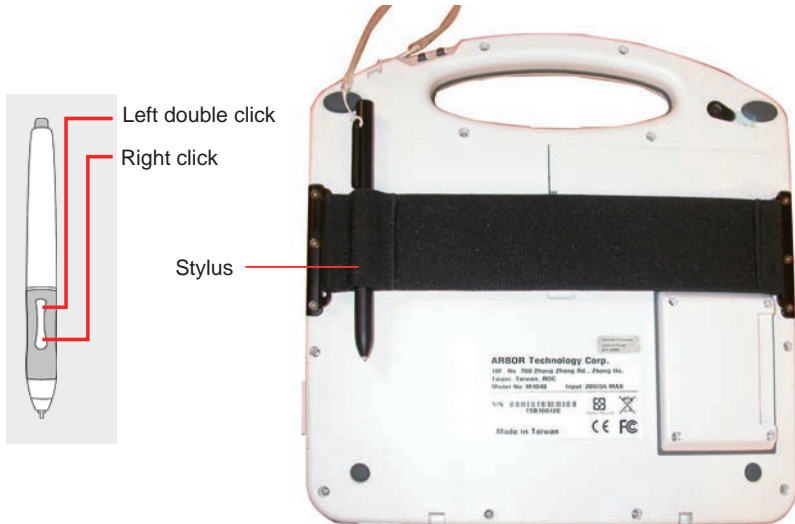

Note:

If you want to close the stylus resistive touch function. Please refer to section **2.4 Function Key Configuration**.



Electromagnetic digitizer with resistive touch

On-screen Keyboard

Press to bring up or close the on-screen keyboard.

Note: The on-screen keyboard is only available after you have logged in to the system. If users want to enter the login password via the on-screen keyboard when logging in, please install the operating system with Windows XP Tablet PC Edition, or else, users must connect a USB type keyboard to enter password.

2.1.2 Replacing the External Battery

1. Turn off the medical tablet PC and disconnect the power adapter.
2. Unplug and remove all the peripheral devices that are connected to the medical PC.
3. Position your finger at the clip of the battery.


The clip of the battery



4. Use your finger to remove the battery.



5. When installing the battery back into the slot, make sure it totally fits into the slot (you may hear a light "click" sound).

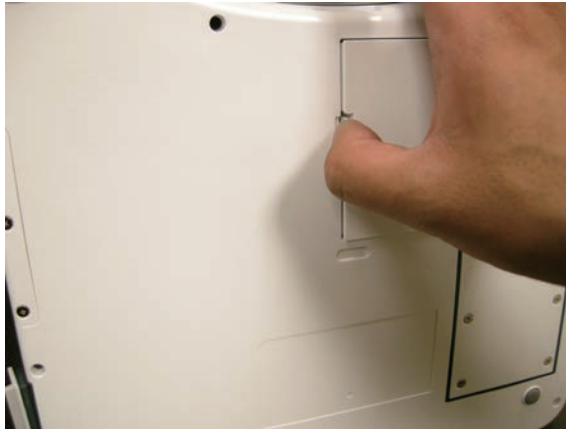

Note: the safety caution and model information are listed on the label of the battery.



2.1.3 Installation

1. **Connect the Power Adapter:** it is strongly recommended that you use the provided power adapter to connect between the tablet PC and the power outlet, especially when you are using it for the first time, in order to ensure the power supply.



2. Connecting to USB Interfaced Devices



USB 2.0 port on the side of the tablet



Use USB cables to connect this tablet PC with external devices, such as CD-ROM, hard disk drives, camera, card reader and WLAN cards.

Note:

You may need a USB hub in order to connect with multiple USB devices as this tablet comes with only one USB port.

3. SIM Card Installation


Step 1: Make sure your medical PC is turned off and then remove the battery at the back of the tablet.




Step 2: there is a SIM card slot hidden under a soft rubber cap.




Step 3: use a finger to open it as the picture below.

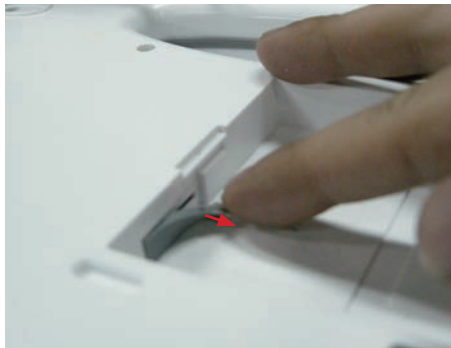


Step 4: aim the SIM card slot and insert the SIM card.

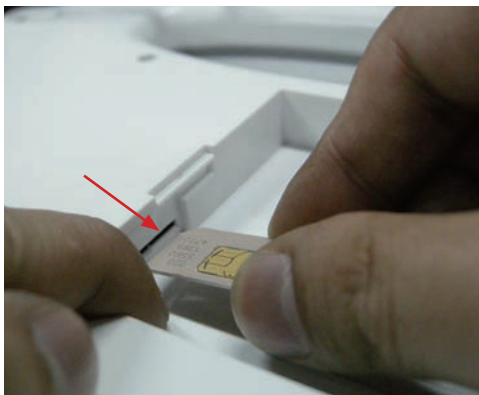


Attention: please insert the SIM card in the correct direction.

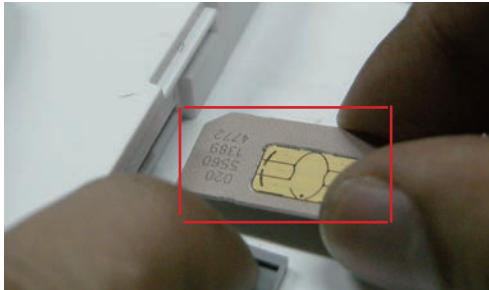

Step 5: push the SIM card all the way to the end until you hear a "click" sound.

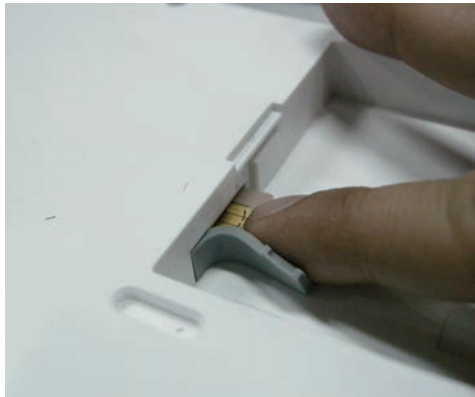

Step 6: put the soft rubber cap back on.

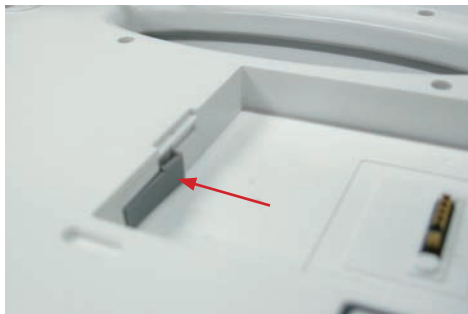

Removing the SIM Card:

Make sure your medical PC is turned off first of all. Use your finger to push the inserted SIM card until you hear a "click" sound and then the SIM card will be removable.



2.1.4 Introducing the M1040 Docking Station

The docking station comes in as an accessory option for M1040. The M1040 tablet PC can be installed on a docking station that can be wall-mounted for more secured operation. The docking station provides extra I/O ports for the tablet PC so that it can connect to additional peripherals. Please go through this chapter to find out more about this docking station.

Front View



Swipe a card through the reader either left to right or right to left, with the magnetic stripe face down.

Inserted the smart card into the reader face-up.

LED Indicators Description

Battery LED

Color	Status	Description
Green (70% or above charged)	On	The external battery has been full charged or stops charging temporarily because the batteries installed in the computer are charging with higher priority
	Blinking	The external battery is charging
Amber (20 to 70% charged)	On	The external battery stops charging temporarily because the batteries installed in the computer are being charged
	Blinking	The external battery is charging
Red (20% or below charged)	On	The external battery stops charging temporarily because the batteries installed in the computer are charging
	Blinking	No power

SmartCard Reader LED

Color	Status	Description
Green	On	Card data detected
	Off	No activity

MSR LED


Color	Status	Description
Green	On	Card data detected
	Off	No activity

Power LED

Color	Status	Description
Green	On	The tablet is placed on the cradle and the adapter is connected
	Off	No power input

Top View

35-Pin POGO
connector

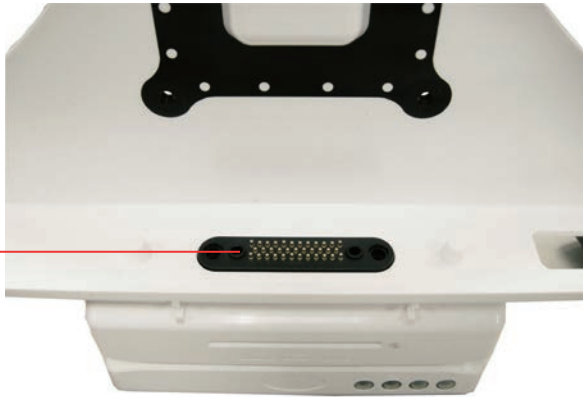


Side View

Card swiping slot


USB ports



Bottom View

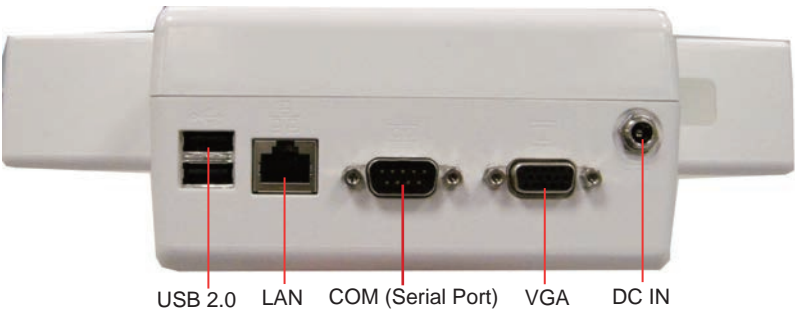

Rear View

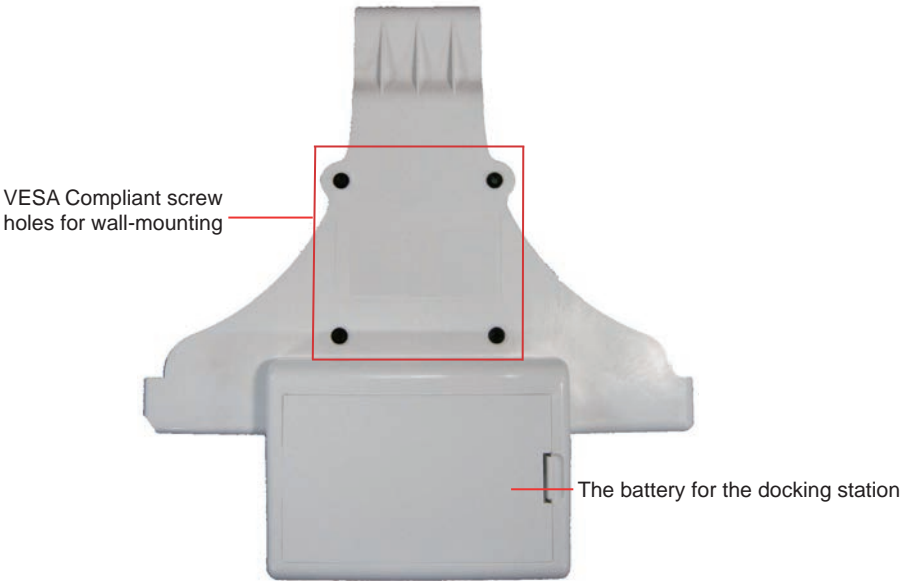

2.1.5 Installing the M1040 on the Docking Station

Please follow the guide in this section to install the M1040 tablet PC on the docking station.



1. When placing the M1040 tablet PC onto the docking station, please do it from a slanted direction.



2. Make sure you align the 35-pin POGO connectors from both the tablet and the docking station.




Note: you may notice that there are two small hollows beside the POGO connector on the tablet, and two small bulging poles near the POGO connector on the docking station. These will help you fit the tablet onto the docking station.

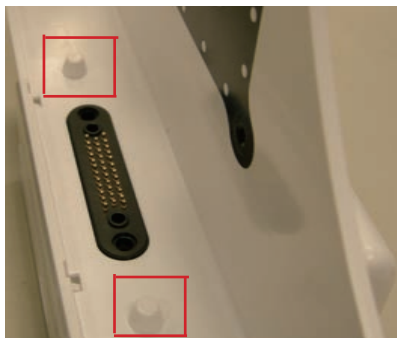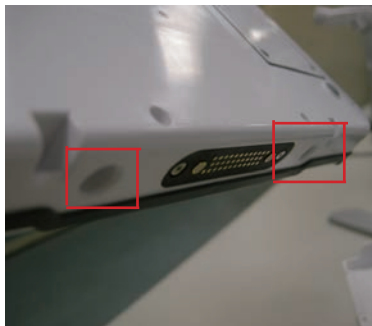

3. Once the tablet has been positioned on the docking station, insert some force to the hinge until you hear a light “click” sound, which means the hinge has successfully secured the tablet PC.

Close up view

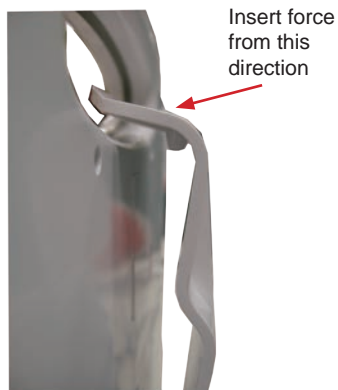

Note:

When you place the M1040 tablet with dual batteries worn out onto the docking station, you can't start the M1040 with the battery on docking station. Use the same adapter for the tablet M1040 and insert to the DC power input on the bottom then you can start the Tablet M1040.

2.1.6 Removing the M1040 from the Docking Station

To remove the M1040 tablet PC from the docking station, use your finger to push the hinge upward and lift the tablet up.



2.1.7 Charging via the Docking Station

When placing the M1040 tablet PC onto the docking station, to charge the docking station, simply use the same adapter for the tablet M1040 and insert to the DC power input on the bottom.



Note:

When placing the M1040 tablet PC onto the docking station, if you insert the DC power input in the M1040 power jack, battery can't be charged.

2.1.8 Connecting with the Peripheral Devices

This tablet PC M1040 highly relies on its docking station to establish connection with peripherals, because the only I/O port on the tablet is an USB 2.0 port.


Connecting to USB Interfaced Devices



USB 2.0 port on the side of the tablet



- Use USB cables to connect this tablet PC with external devices, such as CD-ROM, hard disk drives, camera, card reader and WLAN cards.

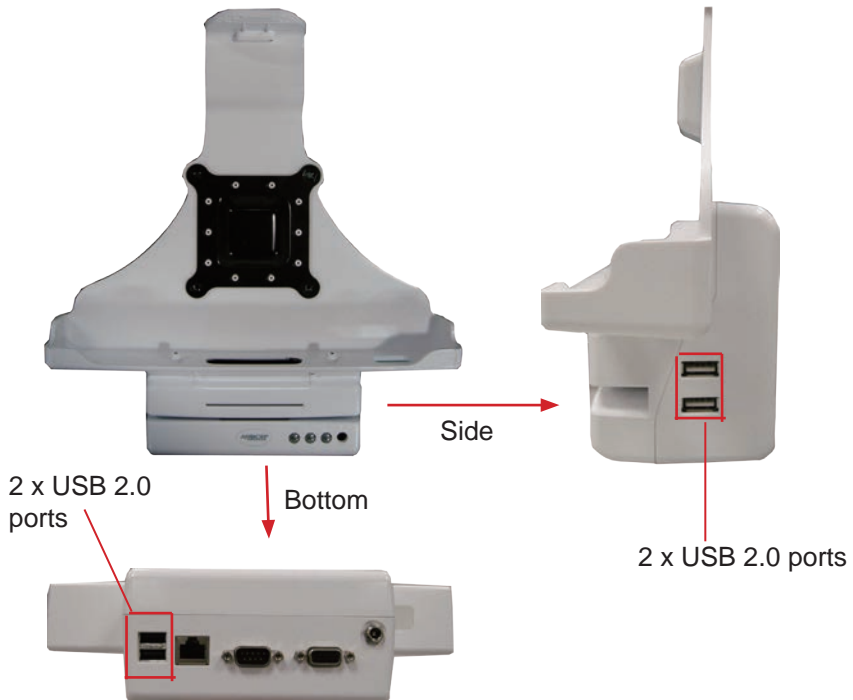

Connecting with Serial Devices

This tablet PC relies on the docking station to connect with serial devices, through the COM port, which is in the form of DB-9 male connector (D-Sub). Thus, in order to connect with serial devices, such as modem, console devices, or data gateway, users need a COM cable with DB-9 female connector.



- Use a DB-9 female connector to plug into the COM port to connect with serial devices.

Connecting with VGA Display Devices

Users can connect this tablet PC to additional VGA display devices through the VGA port on the bottom of the docking station. Most of the CRT and LCD display devices in the current market adopts VGA interface.



Bottom



- Plug a VGA male cable to the VGA port for additional display device.

Connecting with Network Devices

Users also can connect this tablet PC to network through the port on the bottom of the docking station.



Bottom




- Plug a LAN cable (in RJ-45 type) to the LAN port for connecting with network devices, such as ADSL modem.

2.1.9 VESA Wall-mounting (75 x 75)


The docking station can be wall-mounted via the VESA 75 x 75 compliant screwholes at the back. Please take the images below as a reference for how to align the screwholes.


Recommended screw size: M4

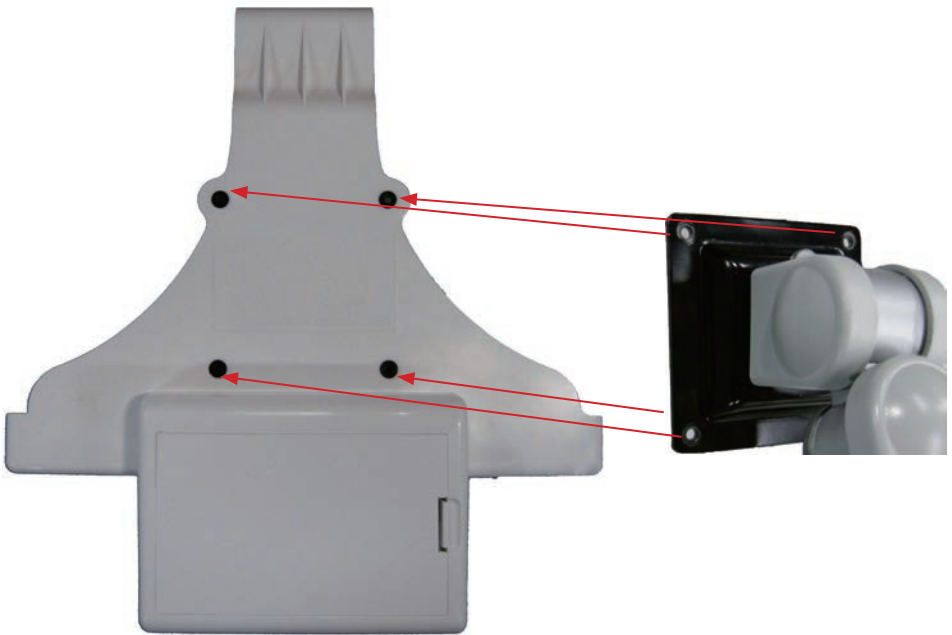

2.1.10 Install Hand Strap

M1040 comes with a hand strap you can attach to the back of the panel to make using M1040 easier. When you want to install the hand strap, locate the six holes and fasten the screws onto the unit. After you install the hand strap onto the unit, you can insert the L/R hand strap cover back to the hand strap.

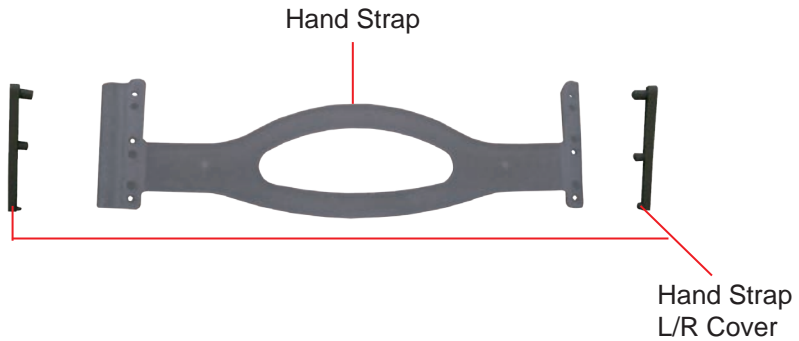

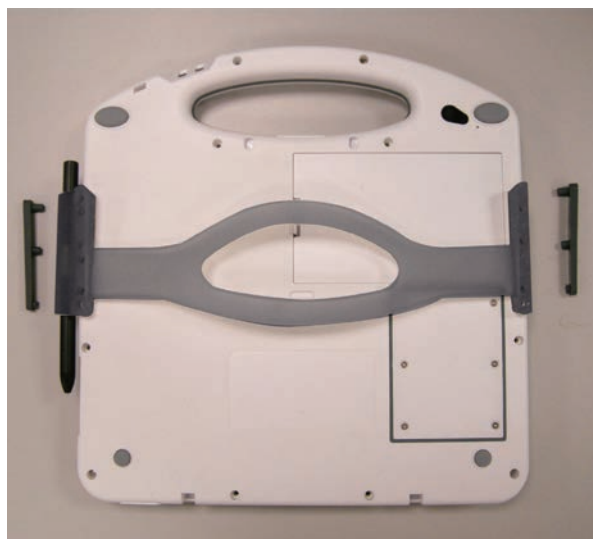


2.1.11 Introducing the M1040 Desktop Cradle

The desktop cradle comes in as an accessory option for M1040. The desktop cradle provides extra I/O ports for the tablet PC so that it can connect to additional peripherals. Please go through this chapter to find out more about this docking station.

Front View

Swipe a card through the reader either left to right or right to left, with the magnetic stripe face down.

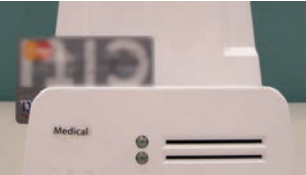

1 x Card Swiping Slot

Inserted the smart card into the reader face-up.




2 x Smart Card Reader

Smart Card Reader LED

Power LED

Battery LED

MSR LED

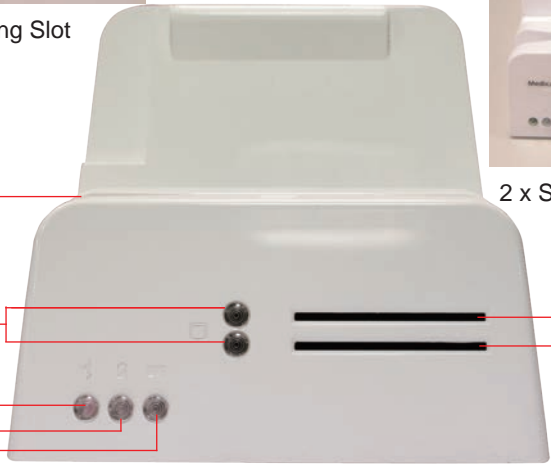

Top View

35-Pin POGO
connector



LED Indicators Description

Battery LED

Color	Status	Description
Green (70% or above charged)	On	The external battery has been full charged or stops charging temporarily because the batteries installed in the computer are charging with higher priority
	Blinking	The external battery is charging
Amber (20 to 70% charged)	On	The external battery stops charging temporarily because the batteries installed in the computer are being charged
	Blinking	The external battery is charging
Red (20% or below charged)	On	The external battery stops charging temporarily because the batteries installed in the computer are charging
	Blinking	No power

SmartCard Reader LED

Color	Status	Description
Green	On	Card data detected
	Off	No activity


MSR LED

Color	Status	Description
Green	On	Card data detected
	Off	No activity


Power LED

Color	Status	Description
Green	On	The tablet is placed on the cradle and the adapter is connected
	Off	No power input

Rear View

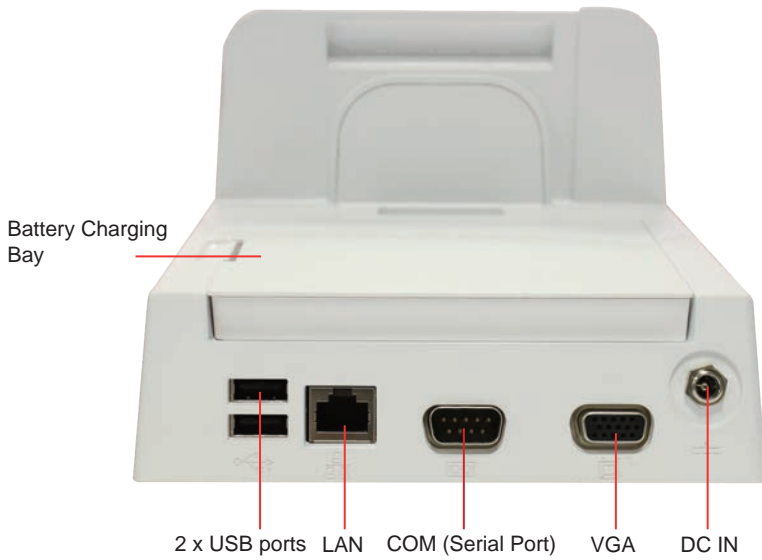

Side View

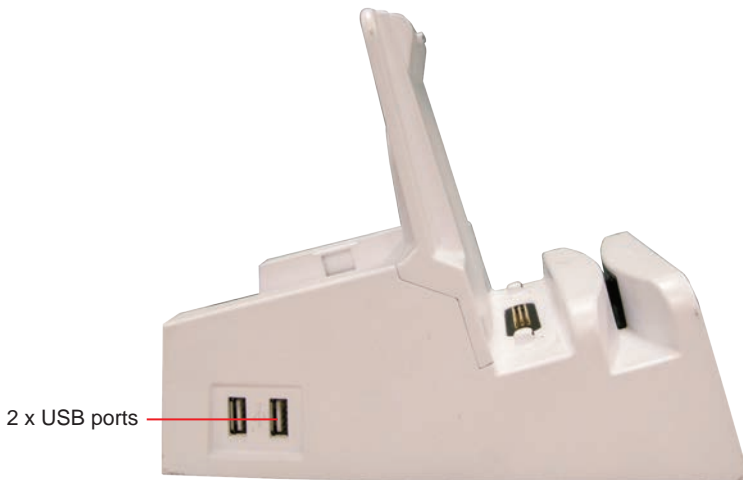

2.1.12 Installing the M1040 on the Desktop Cradle

Please follow the guide in this section to install the M1040 tablet PC on the desktop cradle.

1. When placing the M1040 tablet PC onto the desktop cradle, please do it from a slanted direction.





2. Make sure you align the 35-pin POGO connectors from both the tablet and the desktop cradle.



Note:


You may notice that there are two small hollows beside the POGO connector on the tablet, and two small bulging poles near the POGO connector on the desktop cradle. These will help you fit the tablet onto the desktop cradle.

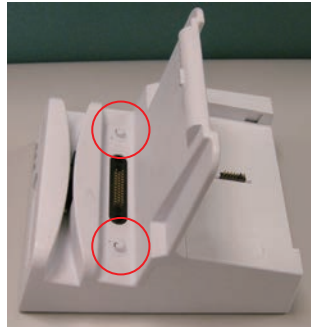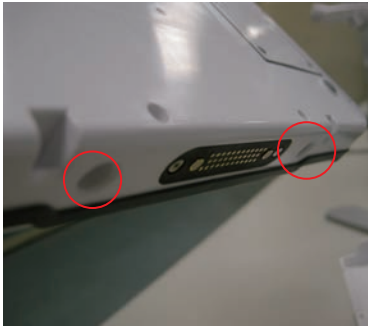**Note:**

When you place the M1040 tablet with dual batteries worn out onto the desktop cradle, you can't start the M1040 with the battery on desktop cradle. Use the same adapter for the tablet M1040 and insert to the DC power input on the back then you can start the Tablet M1040.

2.1.13 Charging via the Desktop Cradle

When placing the M1040 tablet PC onto the desktop cradle, to charge the desktop cradle, simply use the same adapter for the tablet M1040 and insert to the DC power input on the back.

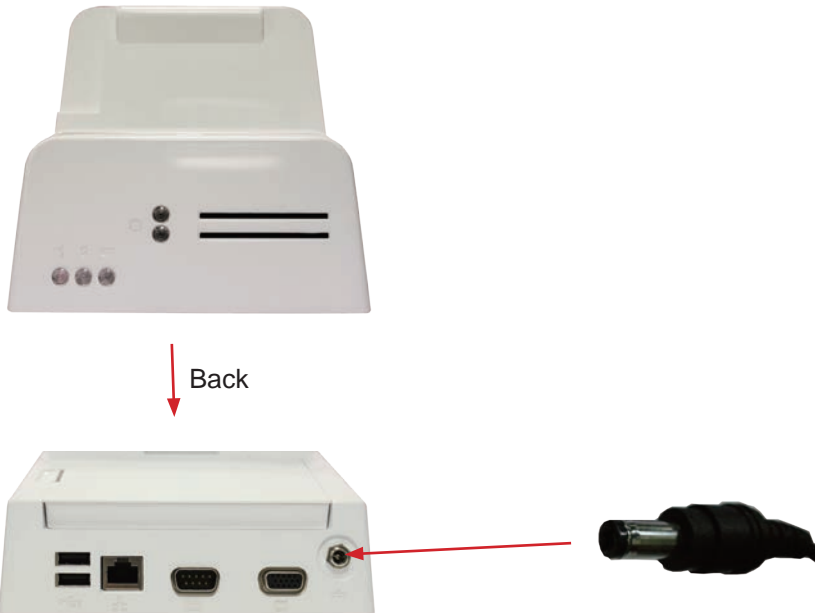

Note:

When placing the M1040 tablet PC onto the desktop cradle, if you insert the DC power input in the M1040 power jack, battery can't be charged.

2.1.14 Connecting with the Peripheral Devices

This tablet PC M1040 highly relies on its desktop cradle to establish connection with peripherals, because the only I/O port on the tablet is an USB 2.0 port.

Connecting to USB Interfaced Devices



USB 2.0 port on the side of the tablet



- Use USB cables to connect this tablet PC with external devices, such as CD-ROM, hard disk drives, camera, card reader and WLAN cards.



Back

2 x USB 2.0 ports



Side



2 x USB 2.0 ports

Connecting with Serial Devices

This tablet PC relies on the desktop cradle to connect with serial devices, through the COM port, which is in the form of DB-9 male connector (D-Sub). Thus, in order to connect with serial devices, such as modem, console devices, or data gateway, users need a COM cable with DB-9 female connector.




↓
Back



- Use a DB-9 female connector to plug into the COM port to connect with serial devices.

Connecting with VGA Display Devices

Users can connect this tablet PC to additional VGA display devices through the VGA port on the back of the desktop cradle. Most of the CRT and LCD display devices in the current market adopts VGA interface.

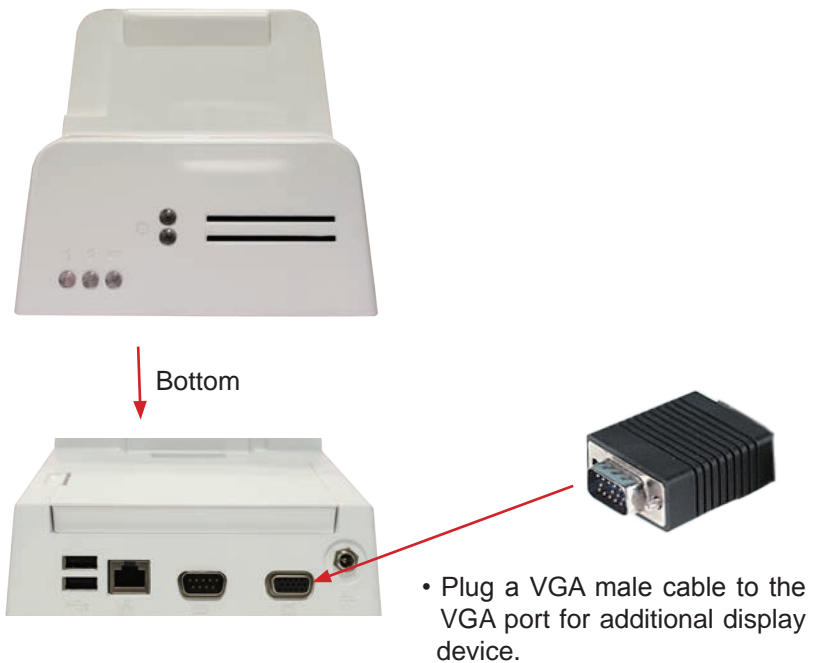

Connecting with Network Devices

Users also can connect this tablet PC to network through the port on the back of the desktop cradle.



- Plug a LAN cable (in RJ-45 type) to the LAN port for connecting with network devices, such as ADSL modem.

2.1.15 Periodic Cleaning & Disinfection

This panel PC is generally employed in medical environment, for example, hospitals, as bedside infotainment (information plus entertainment). It is strongly recommended that users follow the cleaning and disinfection instructions described below to ensure proper maintenance activities.

1. Always power off your unit first, when you clean or disinfect it.
2. To wipe the outer case, use lint-free cloth, lightly moistened with warm water and a mild, non-abrasive cleaning solution made of either:
 - 70% isopropyl alcohol
 - 10% bleach solution
 - Dimethyl ethylbenzyl ammonium chlorides 0.125%, dimethyl benzyl ammonium chlorides 0.125%, Isopropyl alcohol 14.850% (Sani-Cloth®)
 - Isopropanol 17.2%; Diisobutylphenoxyethyl dimethyl bezyl ammonium chlorides 0.28% (CaviCide®)
3. The touch screen can be wiped down (e.g. to remove fingerprints) during operation while powered on using standard computer screen solution.
4. Use dry cloth to clean the rear panel and bottom, especially the areas around the connectors.

Caution:

- Do not spill liquids on or around the Medical PC.
- Do not use other solutions than the ones mentioned above.
- Do not touch, press or rub the display panel with abrasive cleaning compounds, instruments, brushes, or rough-surface materials.
- Never spray cleaning liquids or foam onto the Medical PC or soak it for cleaning.
- Do not use solvents to clean the unit.
- Do not clean, disinfect, or sterilize any part of the system by autoclaving or with the use of ethylene oxide gas; doing so may damage the unit.
- Never spray or squirt any type of liquid onto the Medical PC; if a spray, gel or foam is needed, spray the liquid onto a cloth and then use the cloth to wipe or rub down the component.
- Always avoid contamination to minimize the need for disinfectants.
- Do not spill, spray, or squirt liquids to the power block and the power cable.

2.1.16 Periodic Maintenance

Power Inspection

Inspect the power cable and power block each year for any kind of damage, overheating or corrosion. Damaged power cable or the power block could negatively affect the normal operation of the tablet PC, and thus should be replaced with a new one.

Note:

Turn off the unit before inspecting the power cable or power block.

Battery Inspection

Please keep in mind that “Battery life” means the time the tablet PC will run before it must be recharged, while “Battery lifespan” means the total amount of time the battery will last before it must be replaced.

Please refer to the “**LED Indicators Description**” for more details on how to check the battery status.

First Time Usage

Fully charge the unit when you use it for the first time to ensure proper operation.

Long Term Storage and Maintenance

The unit contains a lithium ion battery that has a shelf life of 2 months when installed in the unit and 1 year when removed from the unit. If the battery fully discharges during storage, then the battery will have to be replaced. If the unit will not be used for an extended period of time, then the battery should be fully charged and removed from the unit. For long term storage, always store the battery separate from the unit.

You can maximize the lifespan of the unit by ensuring that it is used or stored within its ideal operating temperature and always avoid closed, hot locations.

Note:

The lithium ion battery has a shelf life of 1 year from the date of manufacture. The battery must be installed in the unit and fully charged within 1 year.

2.2 Driver Installation

Before you install the drivers, you must make sure the OS (Operating System, in this case, Windows XP) is installed first.

2.2.1 Chipset Driver Installation

1. After you put the CD ROM into the CD-ROM drive, the driver and utility installation main menu appears. Click **Chipset** of the main menu to install the chipset device driver.



2. Make sure you have closed all programs running and then click **Next** to continue.



3. Please read the license agreement first, and click **Yes** to continue.



- Please read the Readme file for system requirements and installation information, and click **Next** to continue.



- The installation is complete. Click Finish to go back to main menu.



2.2.2 VGA Graphics Driver Installation


1. Click **VGA** of the main menu to install the audio device driver.




2. Make sure you have closed all programs running and then click **Next** to continue.




3. Please read the license agreement first, and click **Yes** to continue.

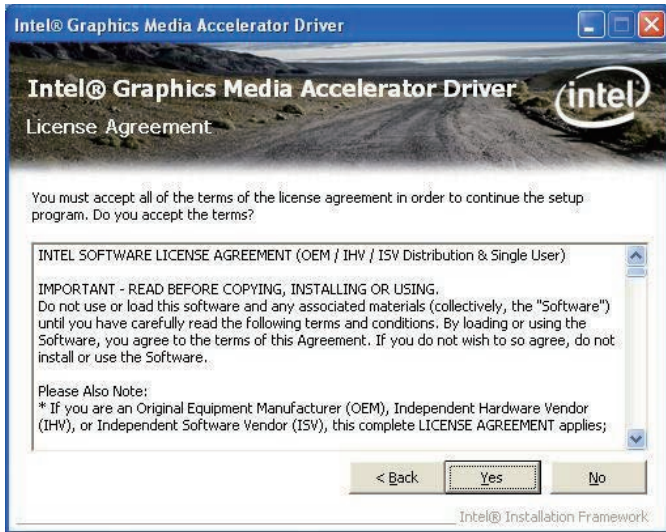


4. Please read the Readme file for system requirements and installation information, and click **Next** to continue.

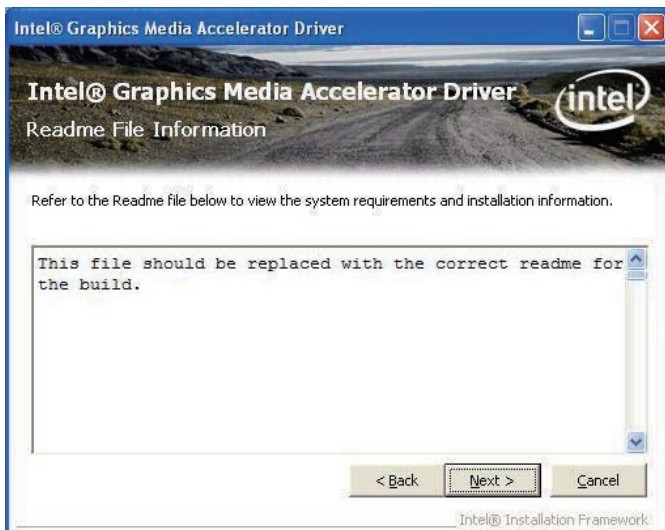

5. Please wait for a while for the data extracting and file copying, , and click **Next** to continue.

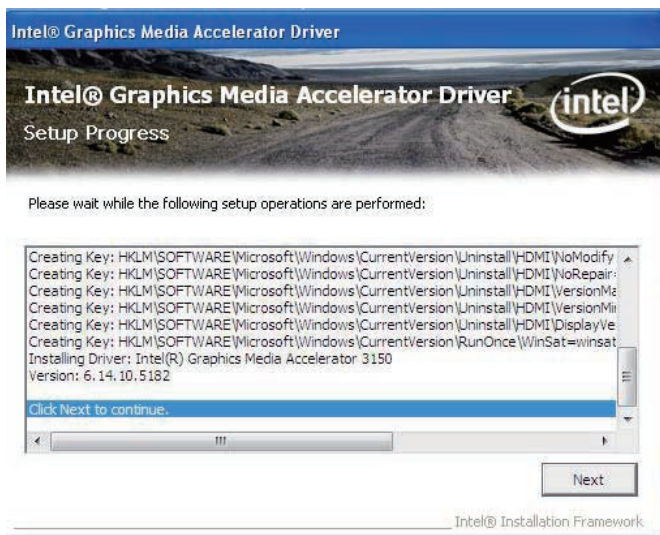

6. After installing the graphics device driver, click **Finish** with **Yes** radio button selected to restart your computer to have the changes take effect, or with **No** to restart this computer later.

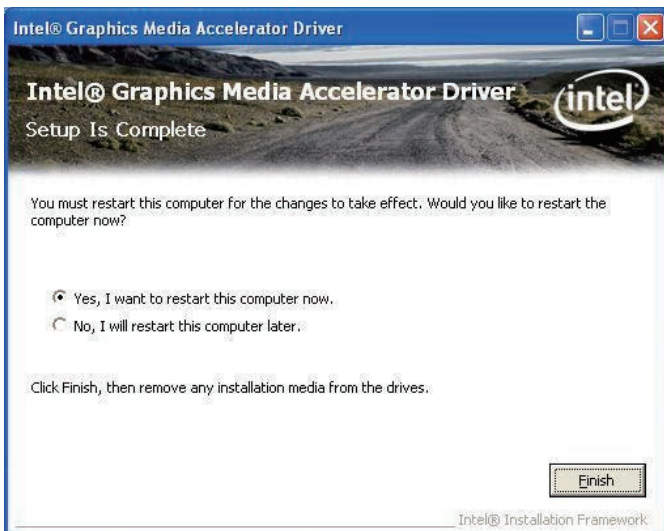


2.2.3 Audio Driver Installation

1. Click **Audio** of the main menu to install the audio device driver.




2. Make sure you have closed all programs running and then click **Next** to continue.

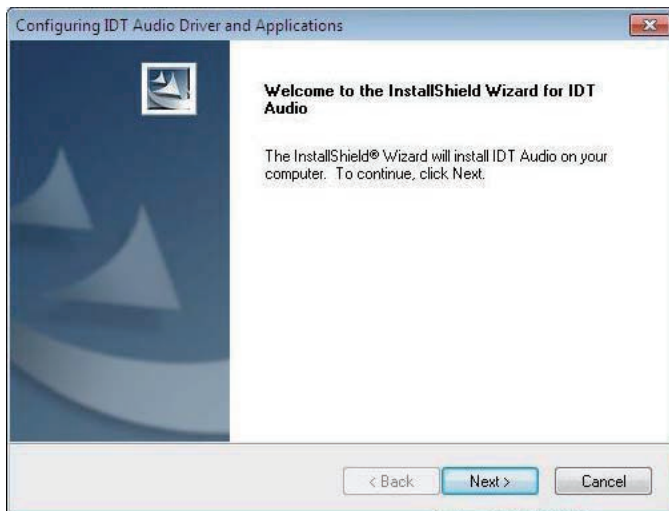

3. Please wait for a short while to initiate the installation.



4. After installing the audio device driver, you will be asked if you would like to restart the computer. It is required to select “Yes, I want to restart my computer now” in order to make sure the program will run properly. Then, click “Finish” to proceed.

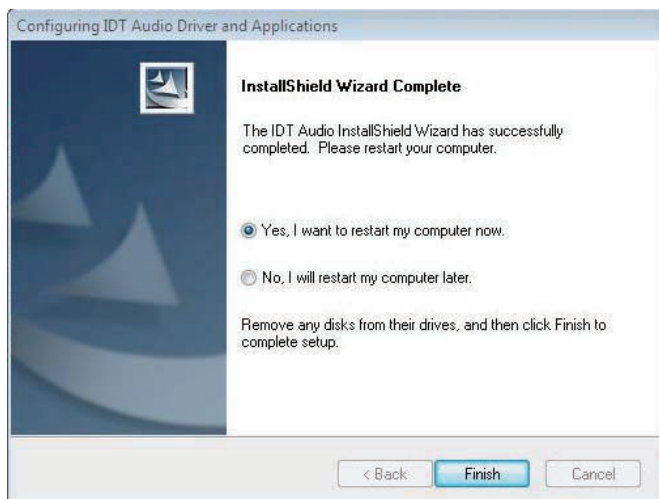


2.2.4 LAN Driver Installation


1. Click **LAN** on the main menu to install the device driver.




2. Wait for the process.

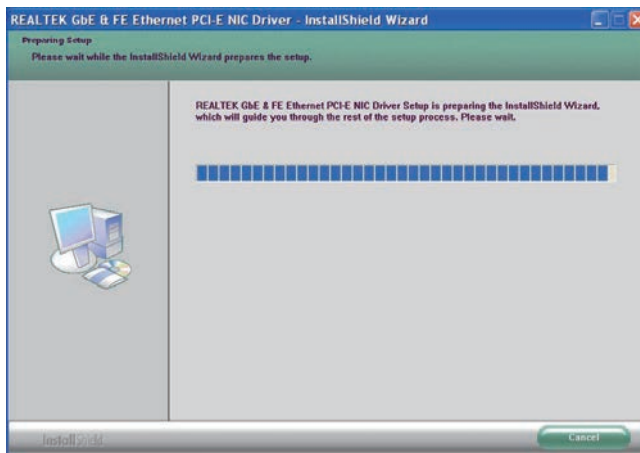


3. Select **Modify** to install new programs.

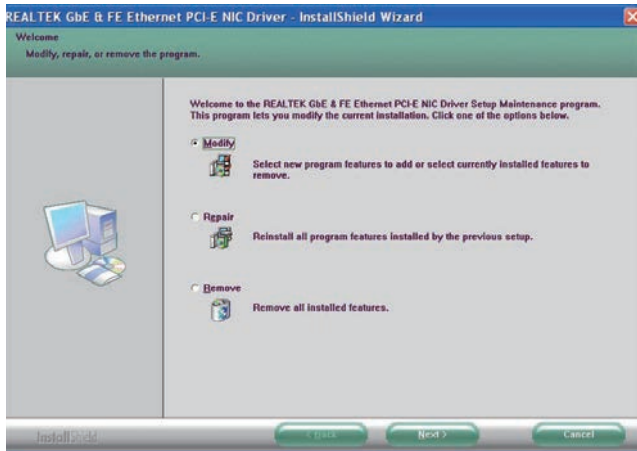


4. Click **Next** without doing any change.

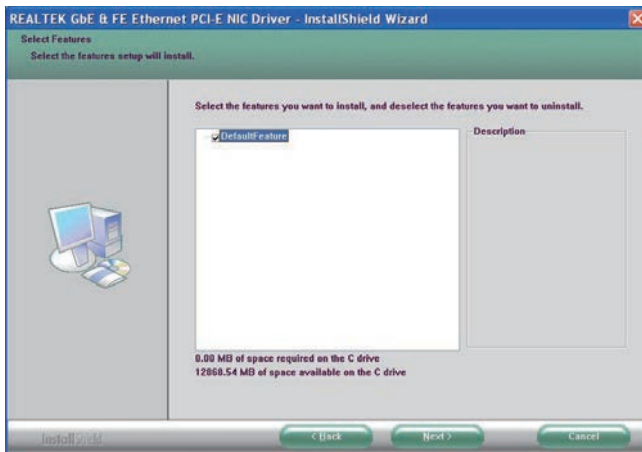

5. Wait for the process.

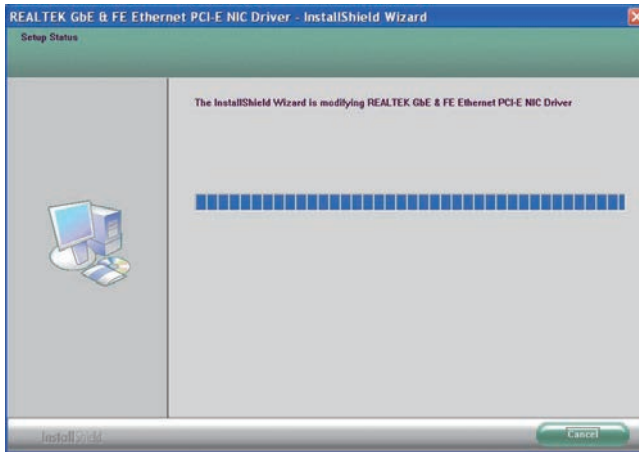

6. Click **Finish** to close the window.

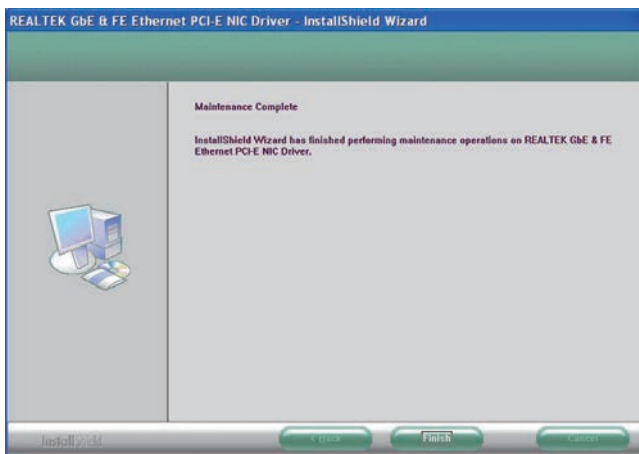

2.2.5 RFID Driver Installation


1. Click **RFID** of the main menu to install the RFID and USB devices driver.



2. Read the driver information and then click **Next** to continue.



3. The driver is being installed, please wait for a while.

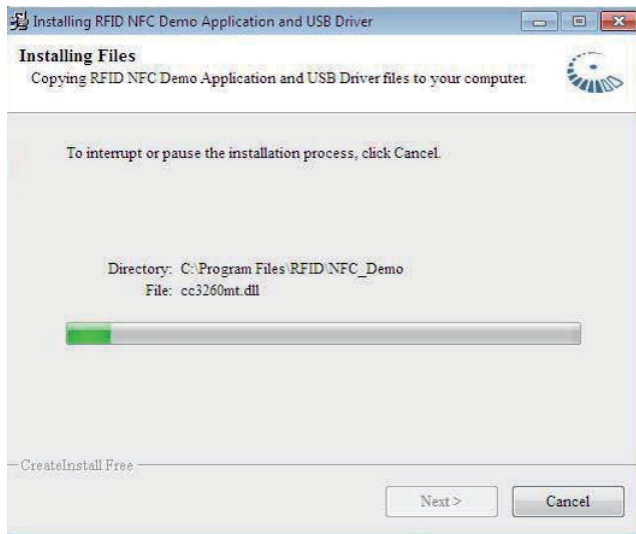

4. Click **Finish** to complete the installation.




2.2.6 COM Driver Installation

1. Click **COM** of the main menu to install the COM devices driver.



2. The driver is being installed, please wait for a while. Select the language and then click **OK** to continue.

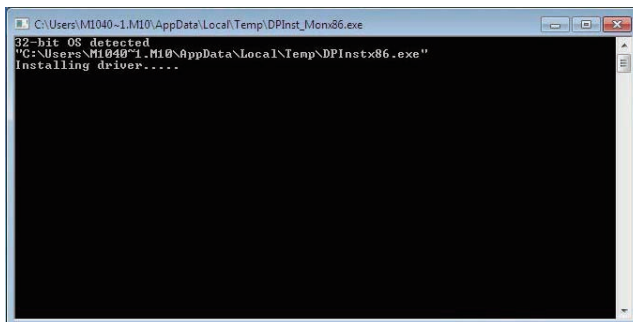


2.2.7 Bluetooth Driver Installation


1. Click **Bluetooth** of the main menu to install the Bluetooth device driver.



2. Select your preferred language for installation.

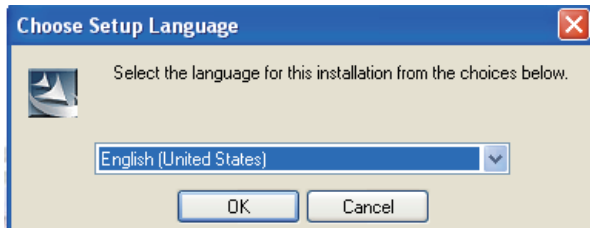


3. Check the driver information and click **Next** to continue.

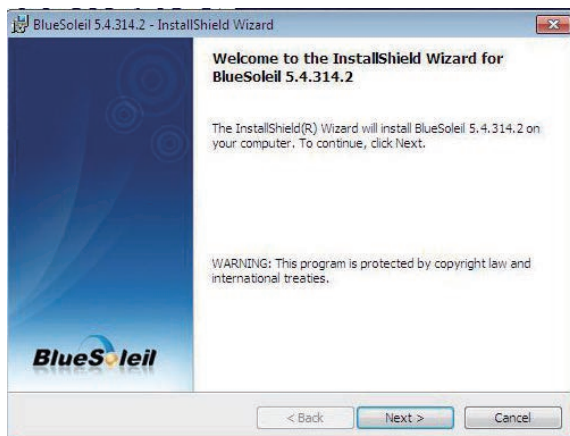


4. Please read the license agreement first; select ***I accept the terms in the license agreement*** and then click ***Next*** to continue.




5. Click ***Install*** to start installation, or click ***Back*** to go back to the previous step.

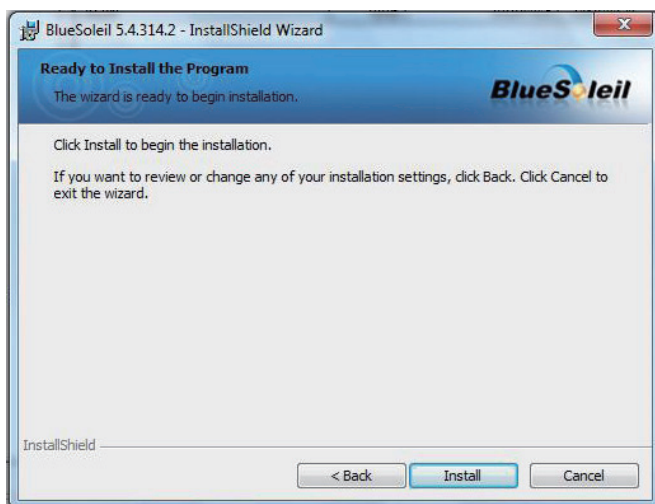

6. After the installation is completed, click **Finish** to close the window.

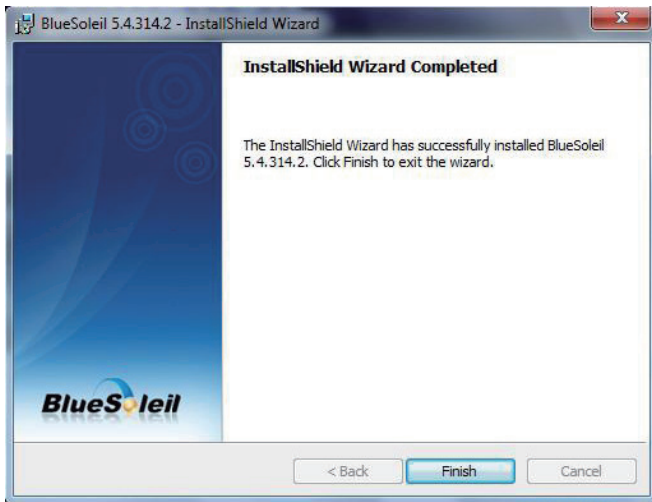

7. And then a message box shows up asking you to restart the computer right away or later for the configuration changes made to BlueSoleil 5.4.314.2 to take effect. Click **Yes** to restart now or **No** if you plan the restart later

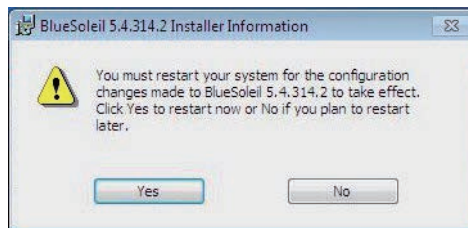


2.2.8 Wireless LAN Driver Installation


1. Click **Wireless LAN** of the main menu to install the wireless LAN device driver.




2. Select preferred language.

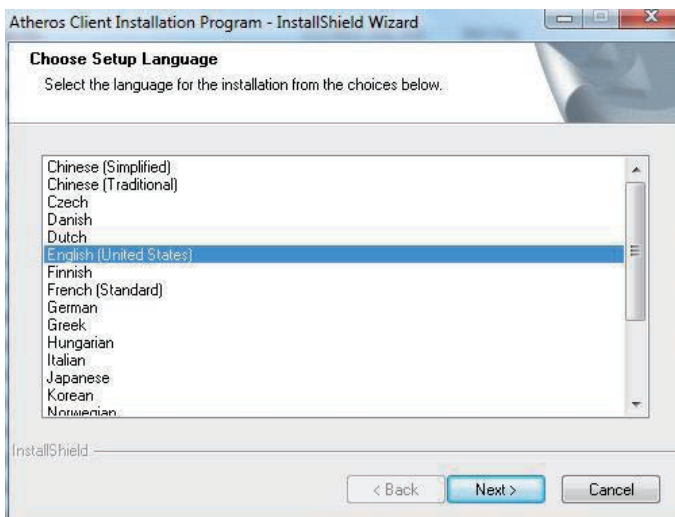


3. Wait for the process.

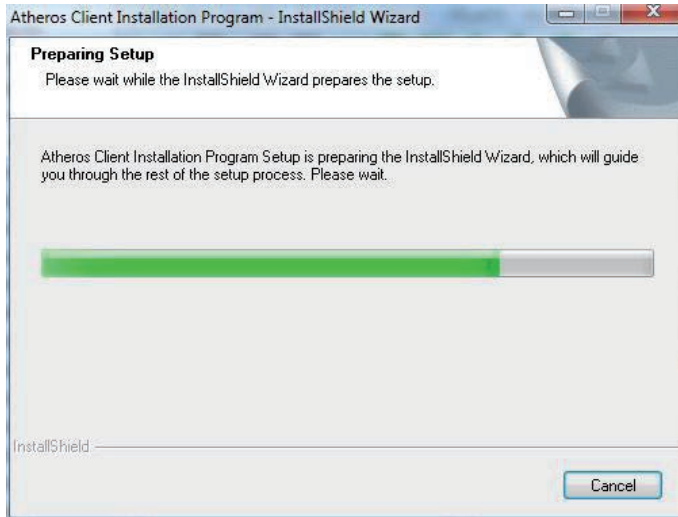


4. Click "Next >".

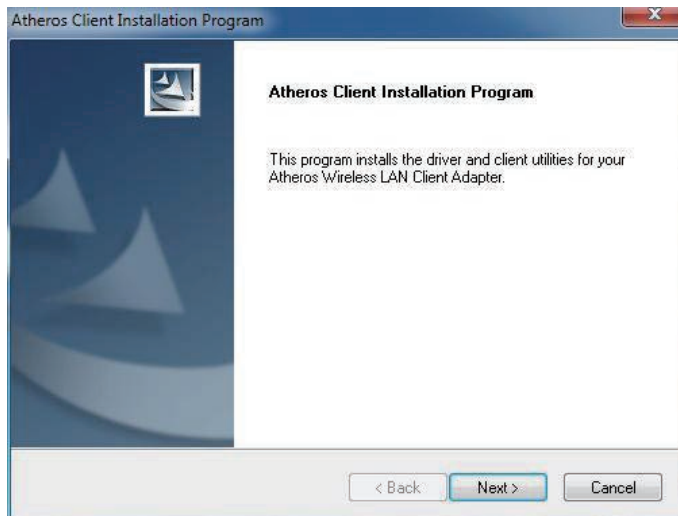


5. Choose “I accept the terms of the license agreement” and click “Next >”.

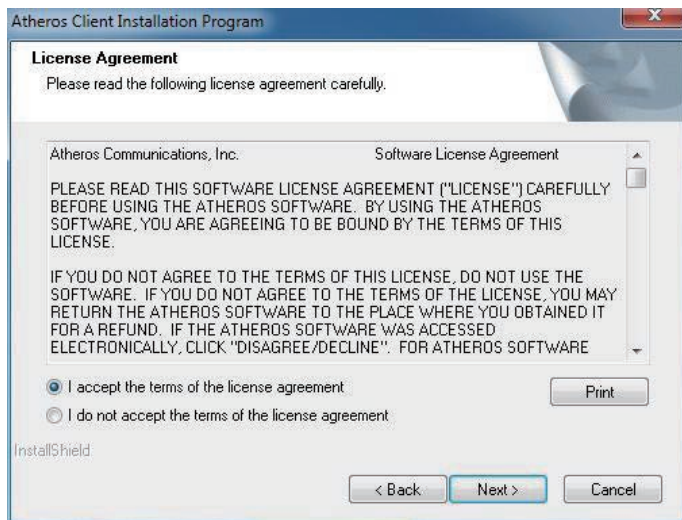


6. Select preferred type and Click “Next >”.

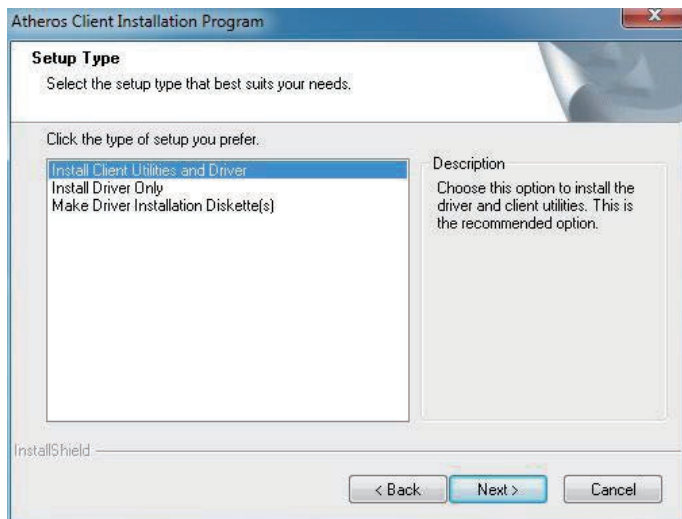


7. Click “Next >”.

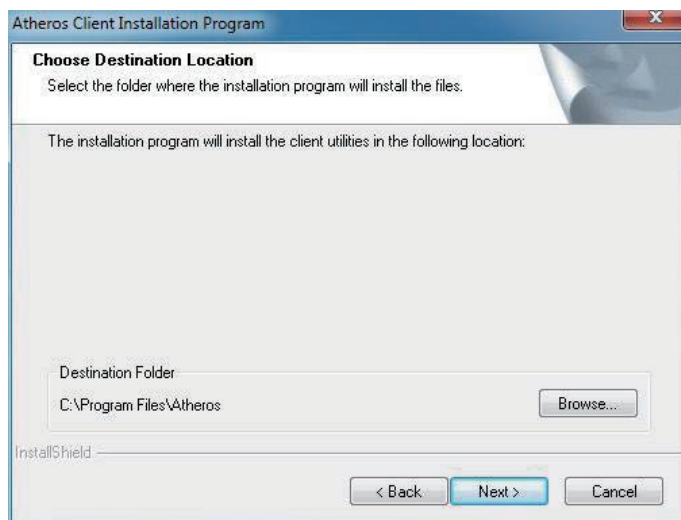


8. Click “Next >”.

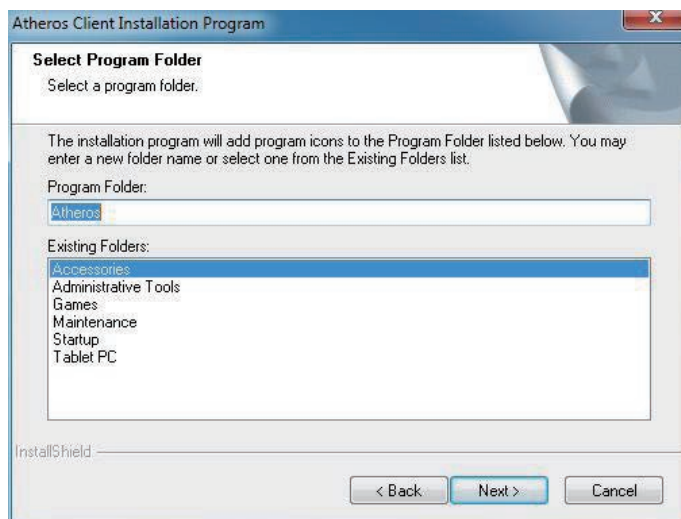


9. Click “Next >” to create shortcuts.

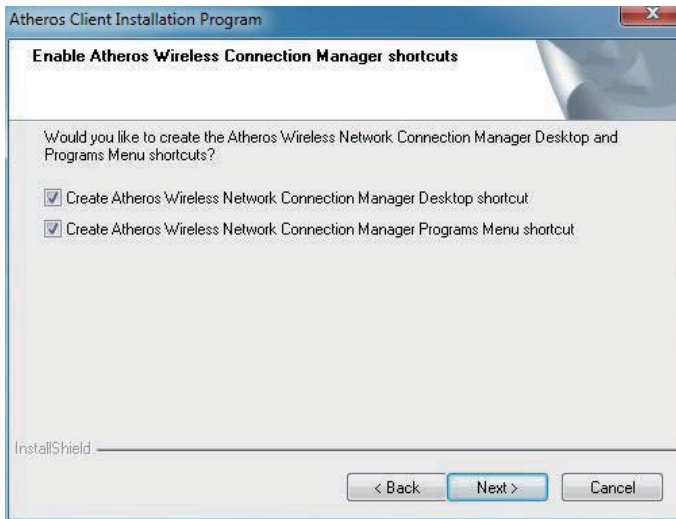

10. Wait for the process.

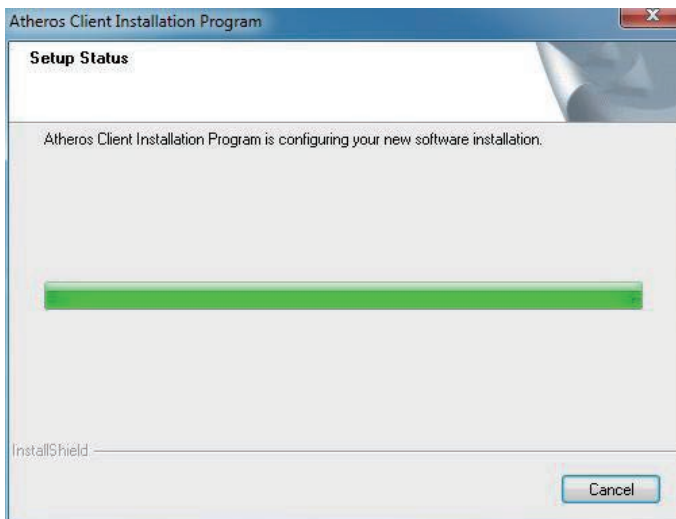


11. Click “Finish” to complete all process.

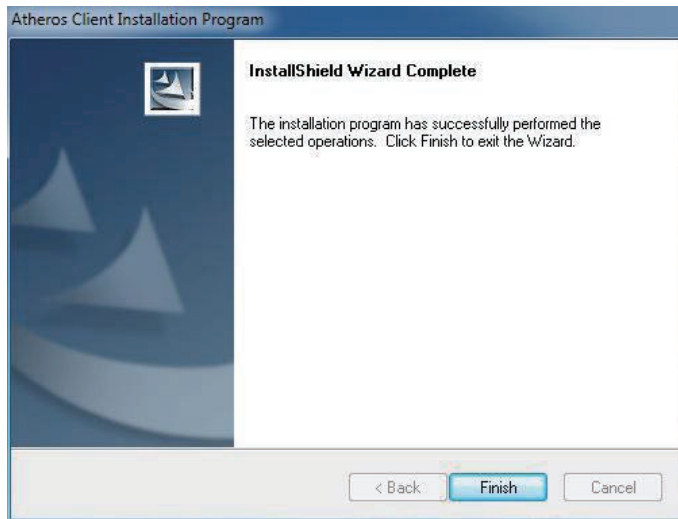


2.2.9 FunctionKey Installation

1. Before installing **FunctionKey**, you should installing **Microsoft .NET 4.0** first, or your program may not function normally. You can find the program under the following path. Execute **dotNetFx40_Full_x86_x64.exe** to extract the file. After that, the right log listed below will pop up immediately.


\\M1040_Function Key AP\Net4.0\dotNetFx40_Full_x86_x64.exe

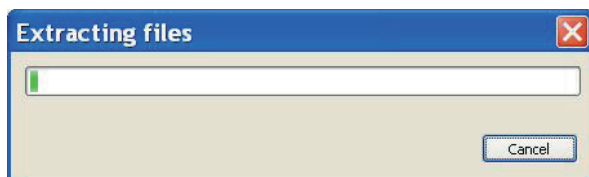


2. Read license terms, check ***"I have read and accept the license terms."*** and then click ***Install***.

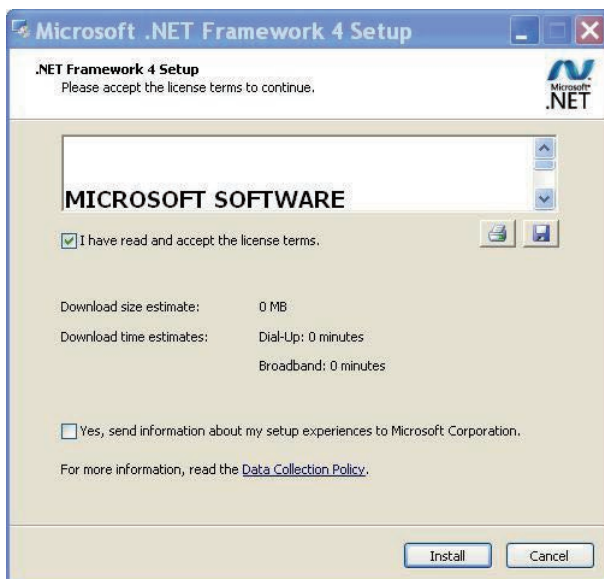

3. Wait for installation progress.

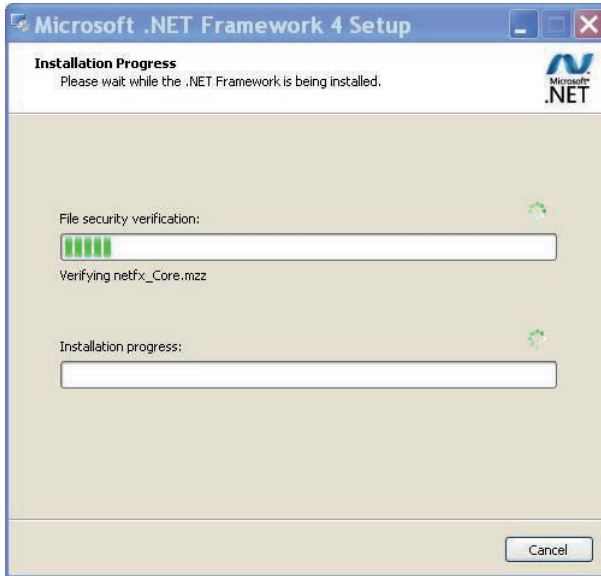


4. Click **Finish** to close the window.

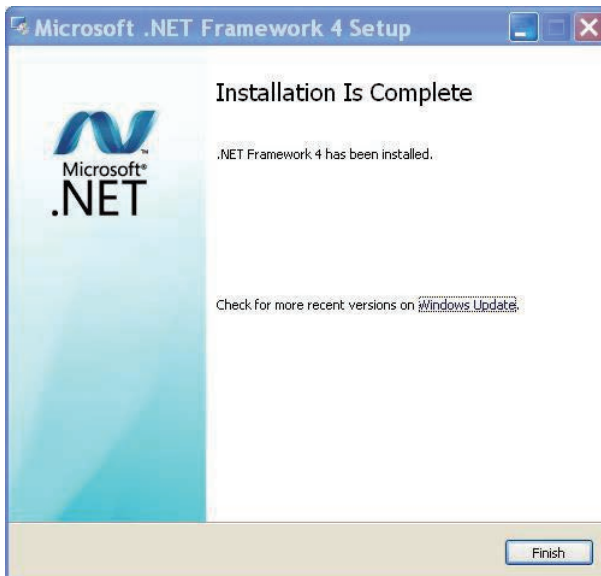


5. And Now, you can start to install **FunctionKey** driver formally. Please go back to the original program. Click **FunctionKey** to install the function key configuration utility.




6. Read Warning and click **Next** directly.

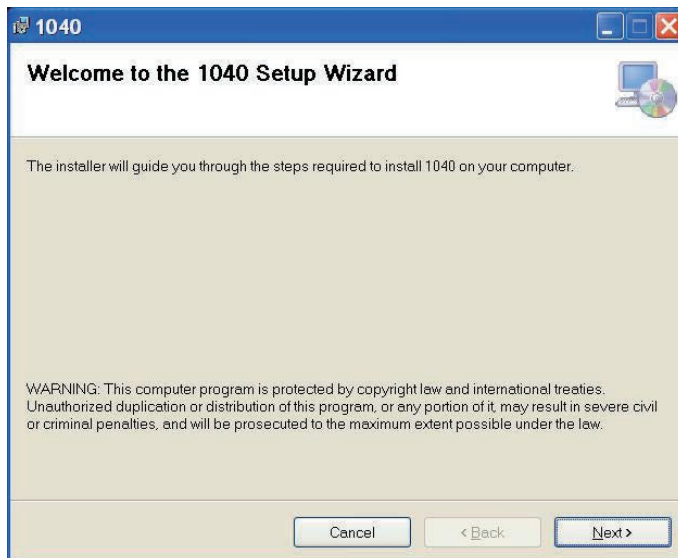


7. Click **Browse** to select another installation folder or maintain the same setting. Set the access to **Everyone** or **Just me**. Then, click **Next**.

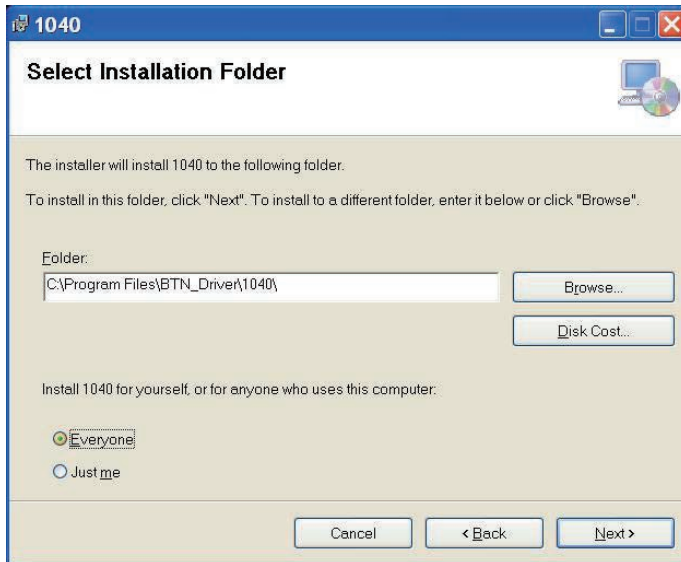


8. Click **Next** to confirm the installation.

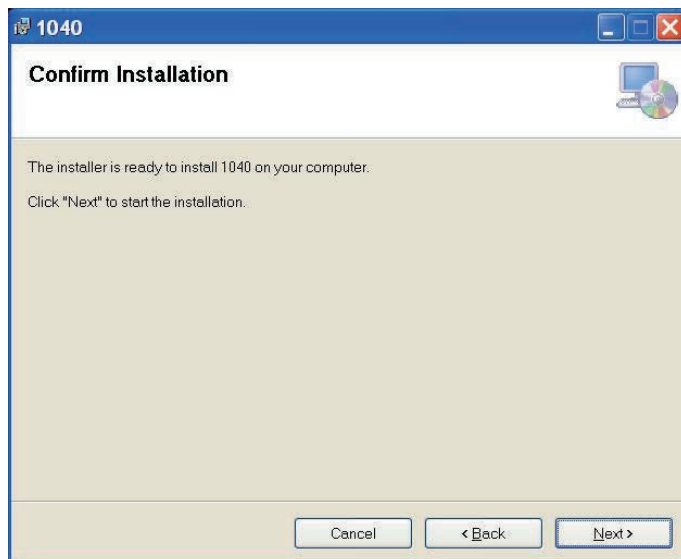

9. Wait for the process.

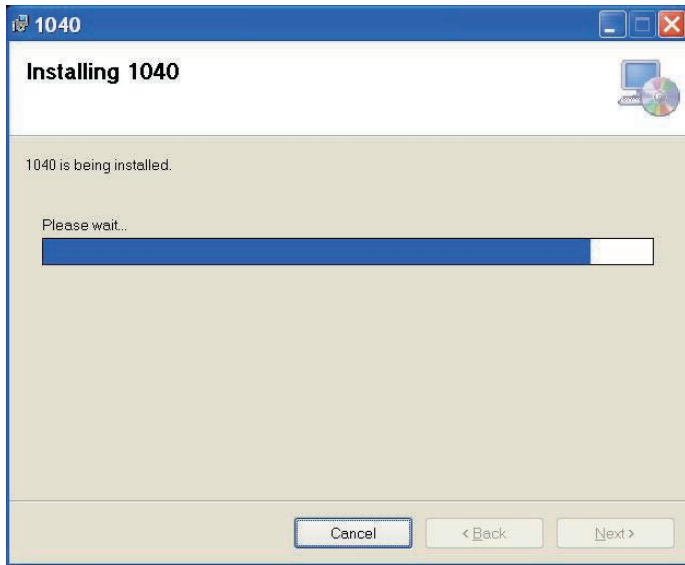

10. Click **Close** to finish installation.

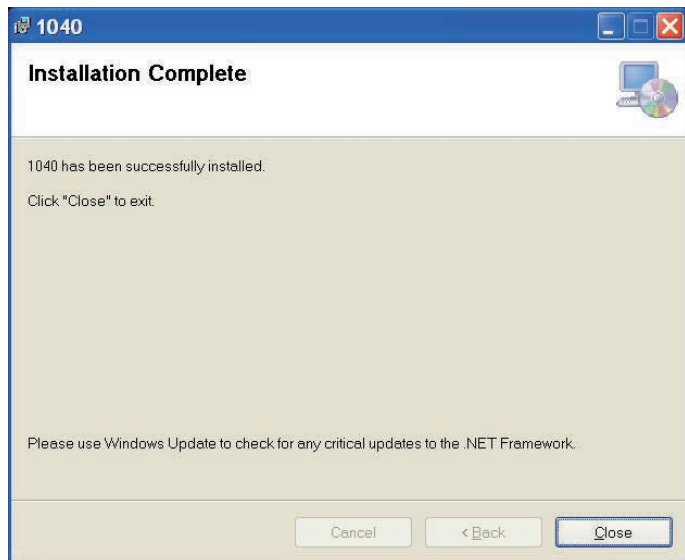


2.2.10 Smart Card Reader Driver Installation

1. Click **Smart Card Reader** of the main menu to install the device driver.



2. After the setup is completed, click **Finish** to close this window.

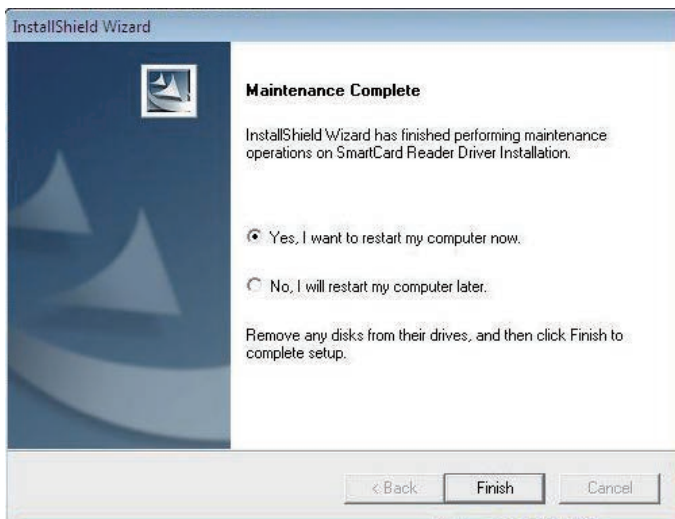

2.2.11 Resistive (Touchscreen) Driver Installation


1. Click **Resistive** of the main menu to install the Resistive driver.




2. Click **Next** to continue.




3. Read **License Agreement** and then click **I Agree** to continue.

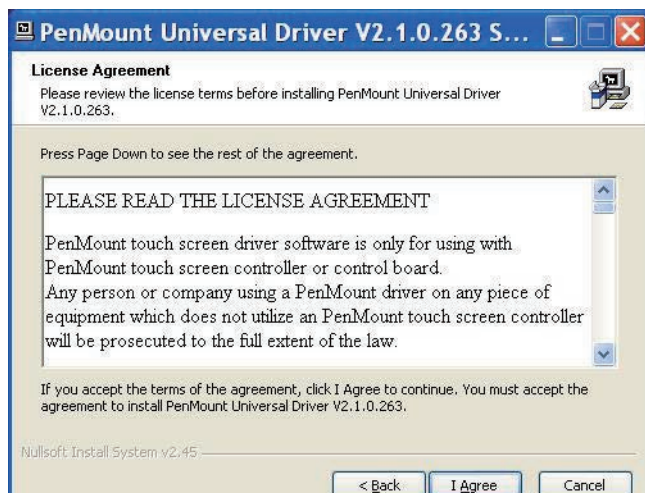

4. Click Browse to choose installation location, or maintain the same setting by clicking **Install** directly.

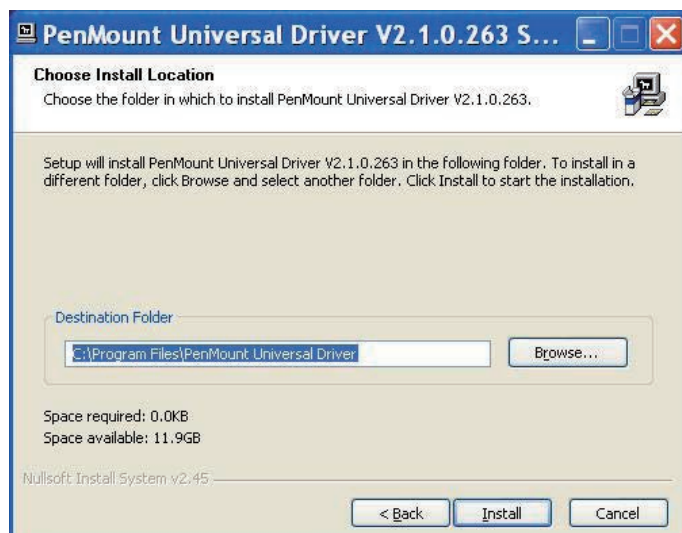

5. Wait for the process.

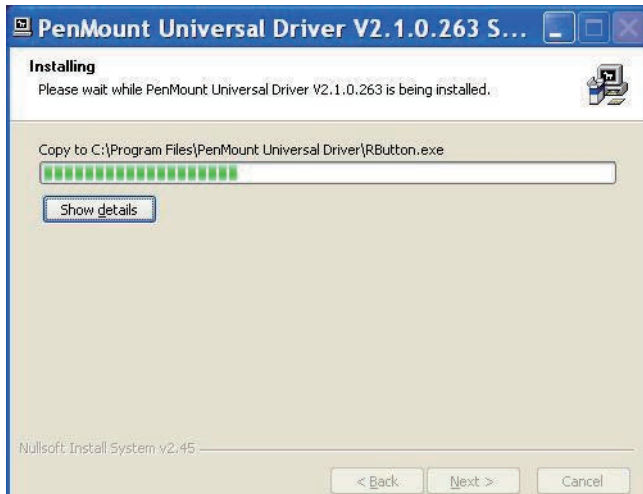

6. After the setup is completed, click **Finish** to close this window.




2.2.12 Digitizer Driver Installation


1. Click **Digitizer** of the main menu to install the Digitizer driver.



2. Click **OK** to continue.

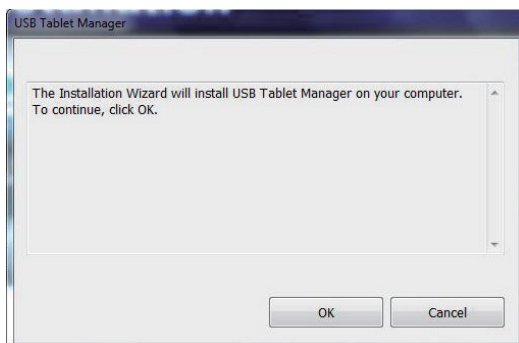


3. The USB Tablet Manager was successfully installed. Click **OK** to close the window

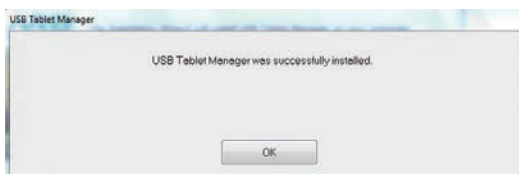

2.3 Touch Screen Calibration

After installing the **Resistive** (touch screen) driver, a shortcut will be generated and shown on the desktop as well as a set of shortcuts on the **All Programs** (or **Programs** in some cases) menu.

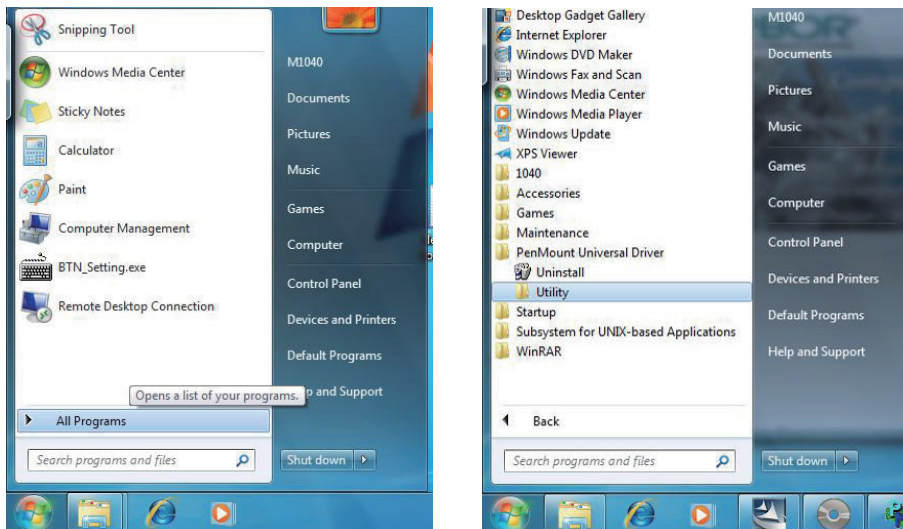


Touch Screen Utilities on the All Programs Menu

How to Do Standard/Advanced Calibration



Before the touchscreen can work accurately, the calibration is needed. Whenever users feel the lost in accuracy, they can do calibration again to adjust the accuracy for proper functioning.


Step 1: double-click on the “PenMount Monitor” --> “Tools” tab.

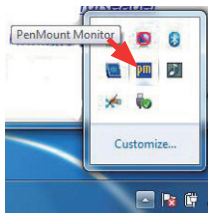

Shortcut Icon of Configuration Utility on Desktop Tray

Step 2: press the **Configure** button and then choose **Standard Calibration** or **Advanced Calibration**. The whole screen will appear in white and a red square rounded by a blue circle with arrows shows up. Meanwhile, the count-down starts from Second 12 right away.

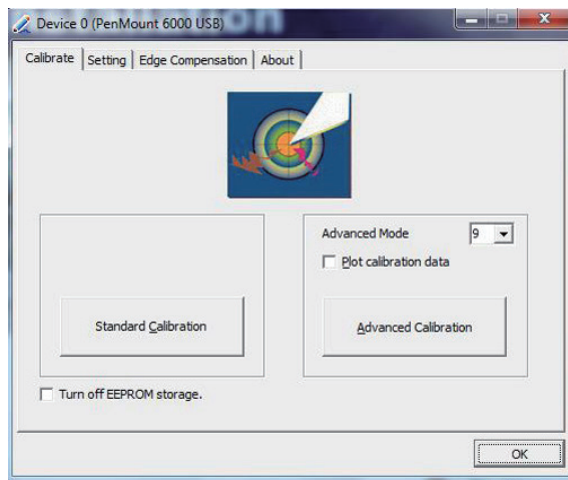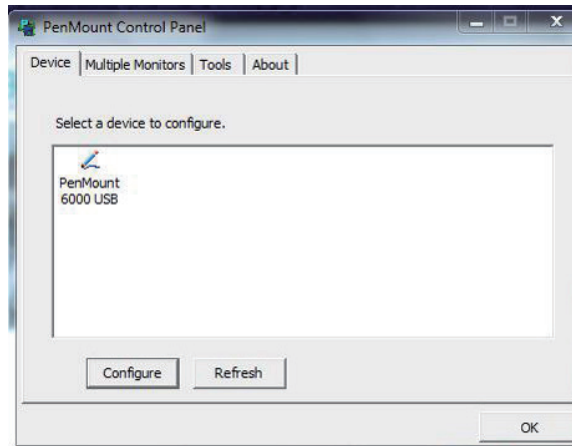


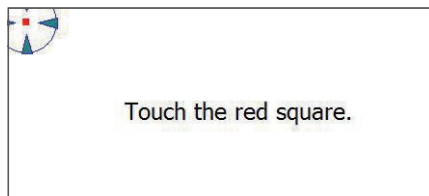

Touch the Red Square



Hold

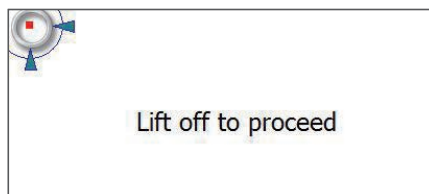

The Calibration of Individual Point Finished


Step 3: Please use your stylus to touch the red square and rest on it until a line "***Lift off to proceed***" shows up.

Step 4: Repeat Step 3 until you finish the Standard/Advanced Calibration.


If there is no action taken within 12 seconds, the calibration task will abort automatically. Please keep in mind that the utility may always repeat the countdown from the beginning if users make an ineffective touch-and-hold action.



2.4 Tablet Properties

1. After installing the **Digitizer** driver, a shortcut will be generated on desktop tray. Double click the icon to start calibration.

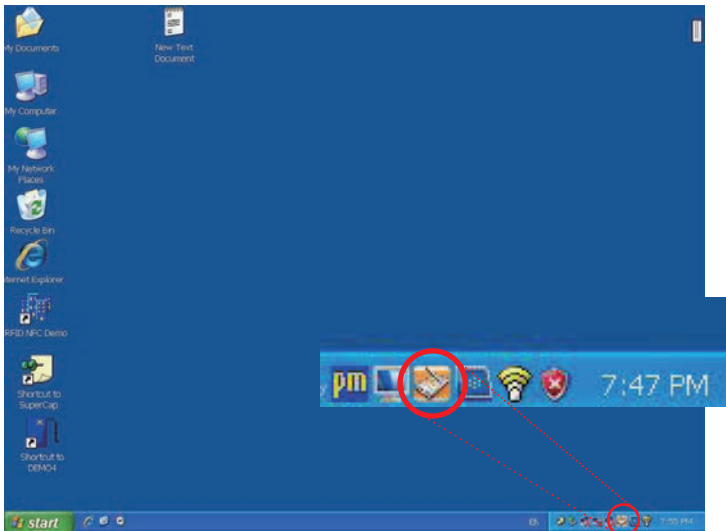


2. The window below instantly pops up. **Table Properties** is a program allowing you to calibrate stylus or change further settings. Firstly, you can set up or change default functions respectively for buttons located on two ends of the narrow rod bulging out from your stylus by selecting from dropdown menus.

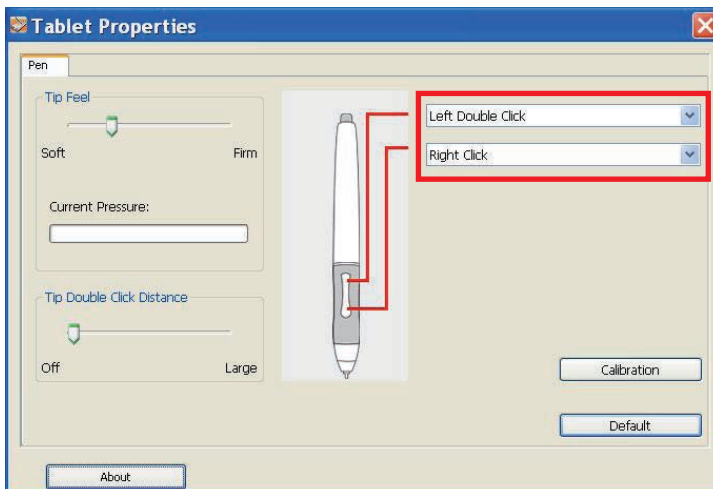


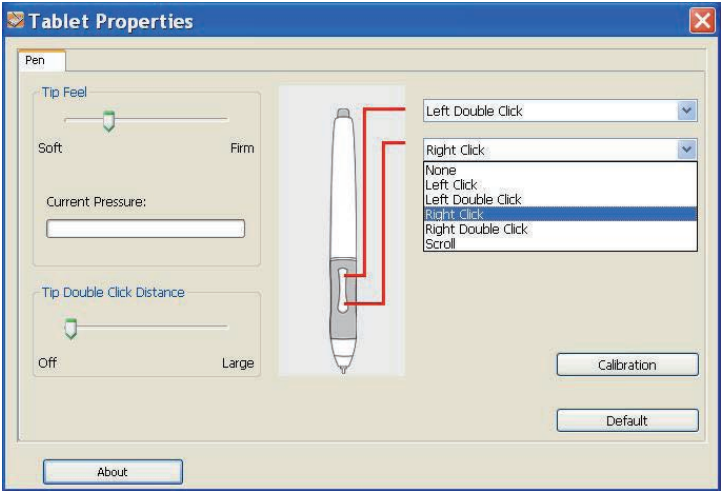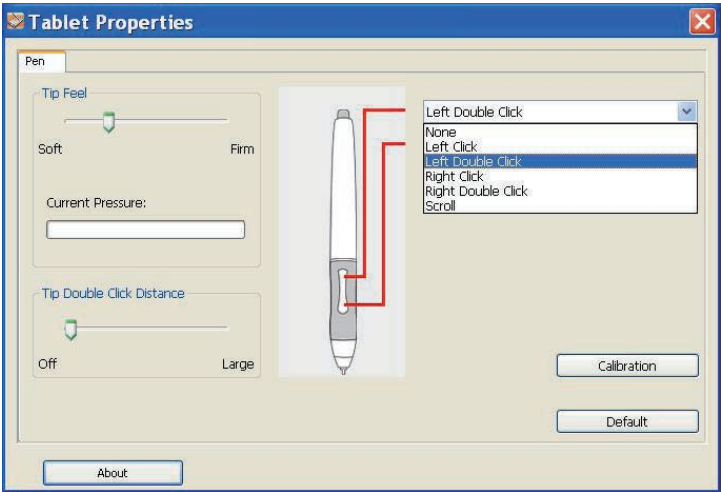

3. In addition, you can also calibrate your stylus for better accuracy. When you feel your stylus is out of control, you may calibrate again to enhance its accuracy. Please click **Calibration** button in the picture.

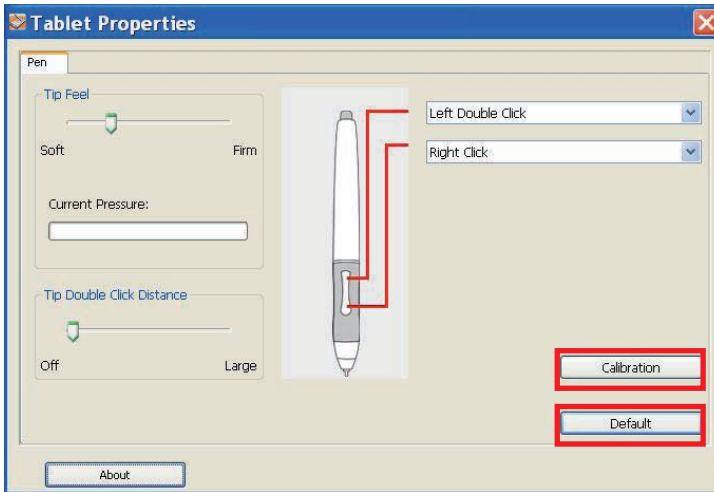


4. Use stylus to click the bull's eye. You need to click 5 point in a row. If you miss any bull's eye, right click your mouse or stylus' (default) lower button or "Esc" on keyboard to abort the calibration .

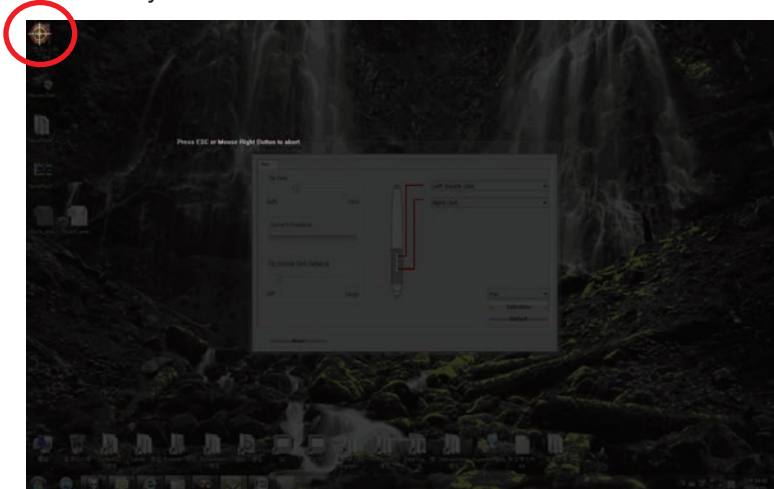

Note: If the calibration is aborted, then the calibration data will disappear. If you want to clear all calibration data, click the "Default" button.

2.5 Function Key Configuration

Double click on **BTN setting exe.** located under M1040 on the All Programs menu to launch the Function Key Configuration.

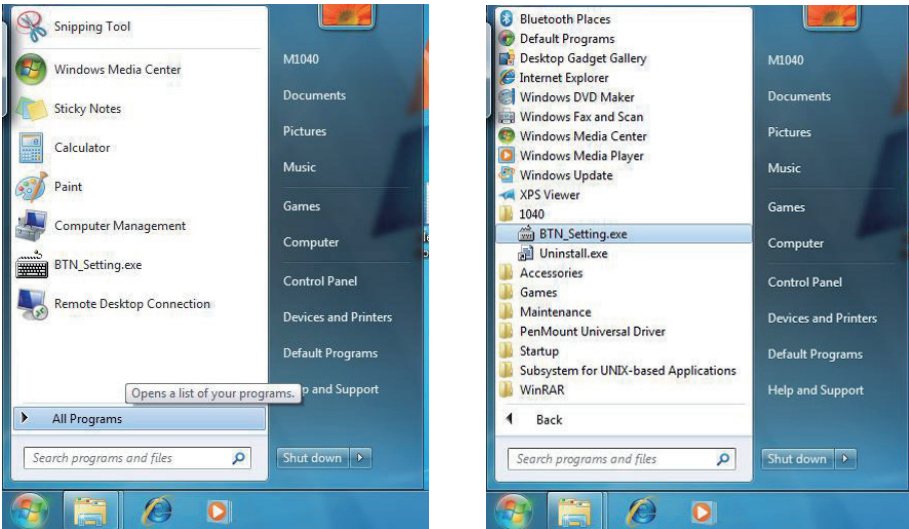

Programmable Control Buttons


Button	Default
5-way function key	Up/Down/Left/Right/Enter
F1~F4	F1~F4 function on Keyboard

Note: You should install .NET Framework 4 before configuring Function Key. The program is located under the path below:


M1040_Function Key API\Net4.0\dotNetFx40_Full_x86_x64.exe

Please turn to **Section 2.2.9** for installation details.


1. Users can re-define the 9 function keys on the front panel, including F1~F4 Button, Up/Down/Left/Right/Enter Button.

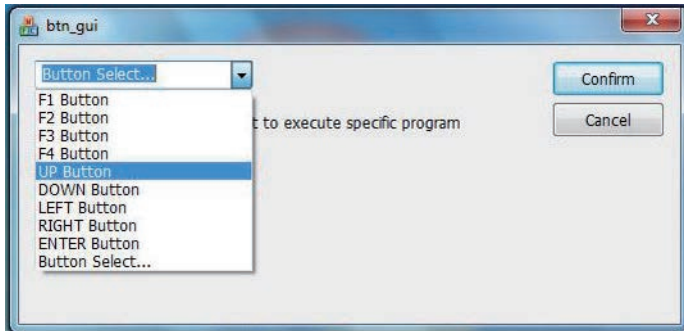

2. Choose **Set Hot Key** to reveal function selection list.

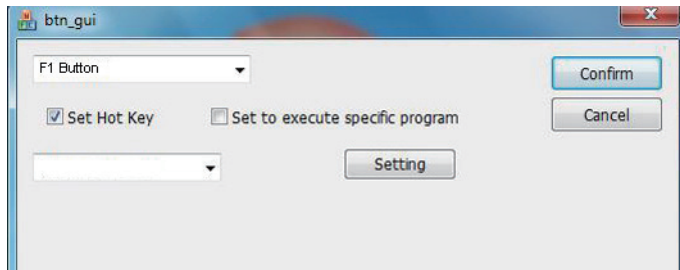


- After you set one programmable function key, press **Setting** to save the configuration. When you finish all 9 function keys' configuration, press **Confirm** and then reset the computer, the redefined values will come into effect when you restart the system.

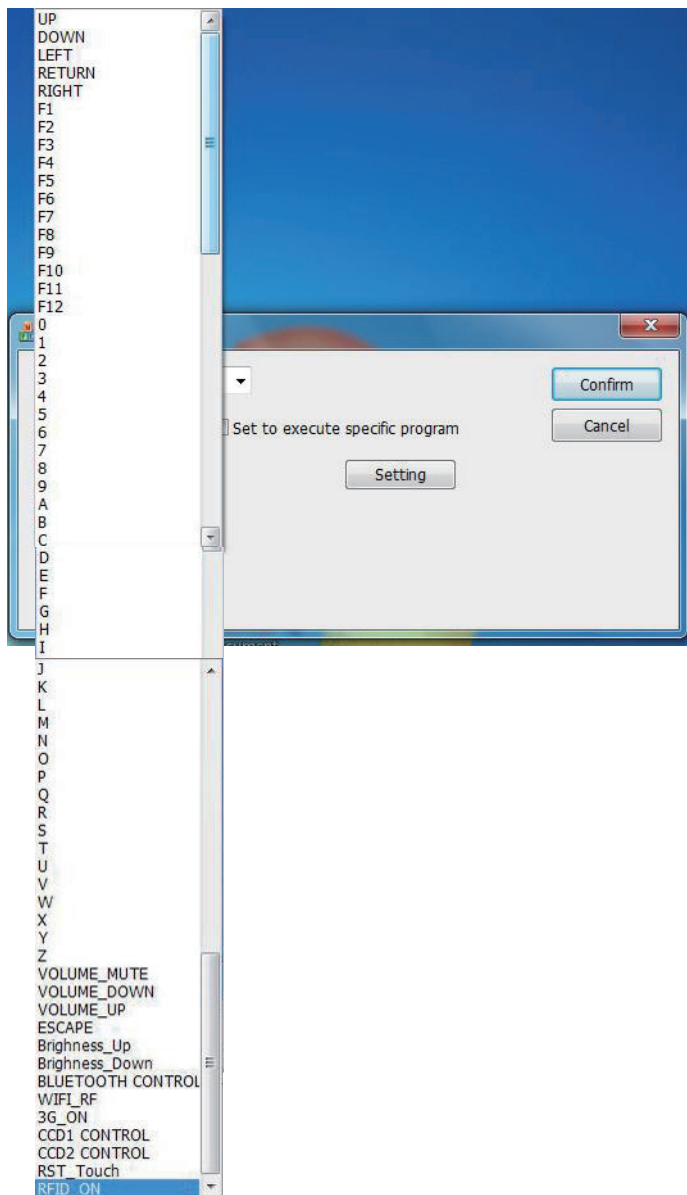


2.6 Gesture Setting

1. Due to the touchscreen function of this medical tablet, you can take advantage of that to set hot key or do other settings. Open up the program named **PenMount Gesture** under **Programs**, or click the little icon in red circle shown in system tray.

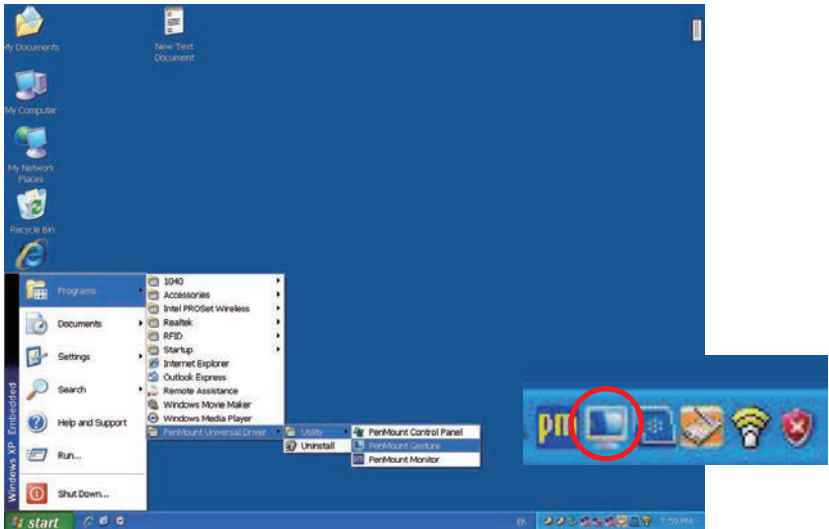


2. The **Gesture Setting** window will jump out right away. Click the upward arrow in red square.

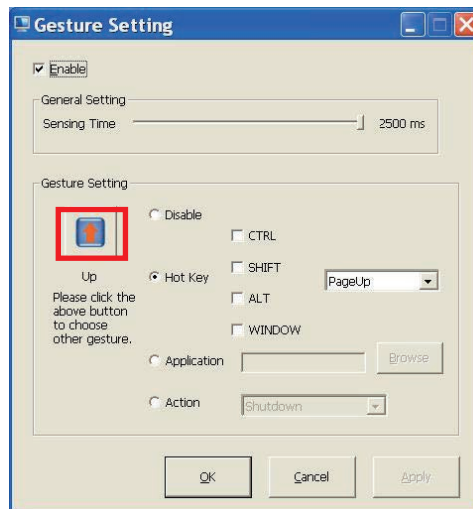

3. And then another **Gesture Select** window will pop up. Each mark in this menu represents your gesture on screen. For example, the upward arrow indicates tha you move your finger from bottom to top across the touch screen. The rest are similar. You may use your gesture applied on the touchscren to do further configuration. Select a gesture you would like to define.




4. Then again, choose **Hot Key**, **Action** or **Application** to set each gesture's corresponding function. You may diable it, too.

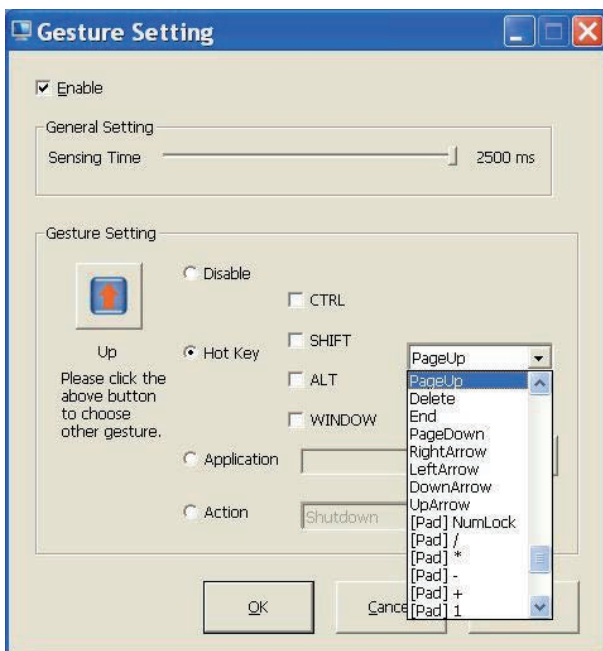


2.7 RFID


1. Once you've installed RFID driver properly, a software called **DemoAP** will appear in your **Programs**. This is a test program. You may install your own RFID-related program. But now, we want to introduce how to test your RFID function, so please open up this software from Programs or shortcut on desktop.

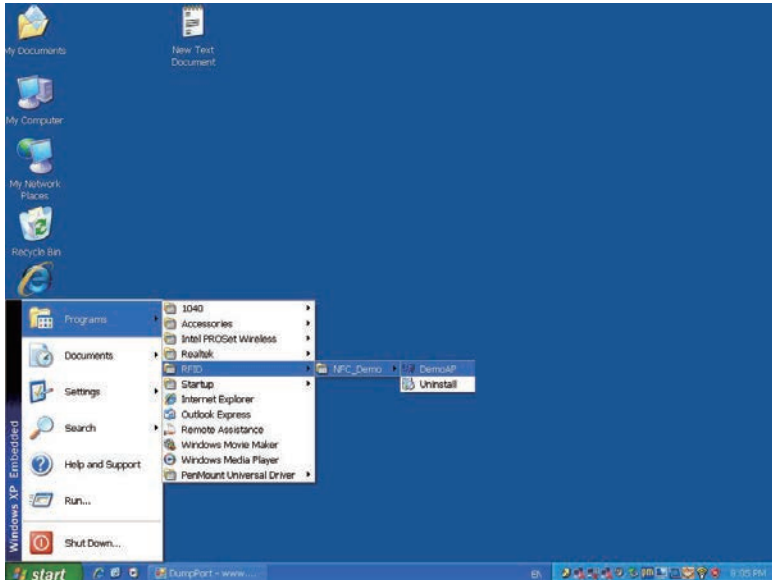


2. In the beginning, the **Status** column shows **Disconnected**.

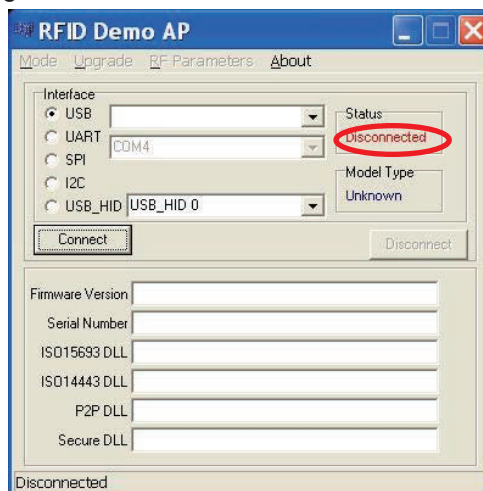


3. Turn on RFID switch, select **USB_HID** as below, and then, **Status** will become **Connected**, meaning your RFID is activated.

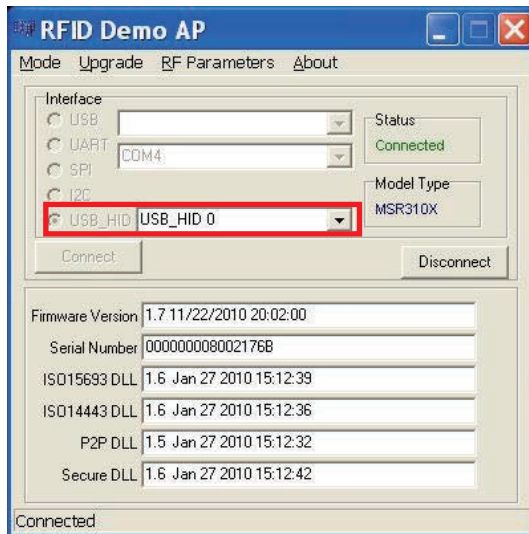


4. To demo test the RFID, please go to “**Mode**” --> “**Reader**.”

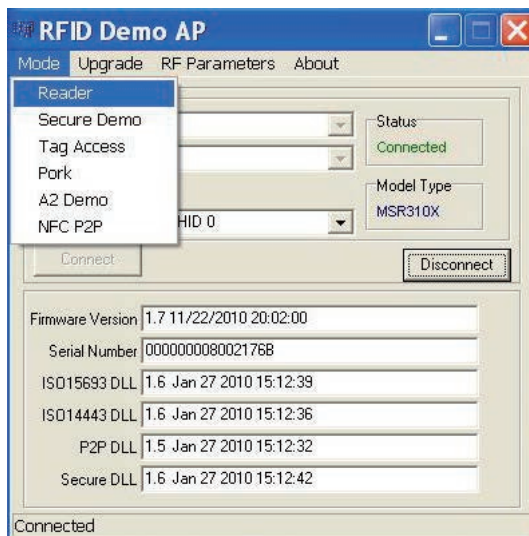

5. Reader Mode.

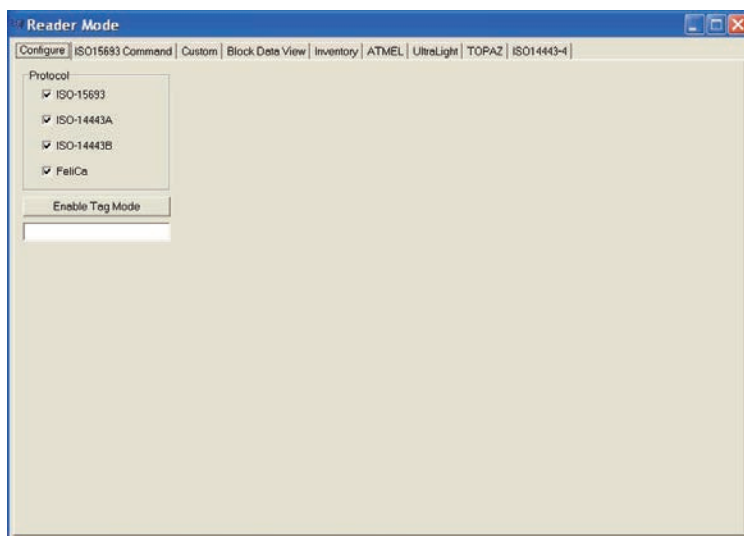


6. Select “*Inventory*” on the top menu bar.

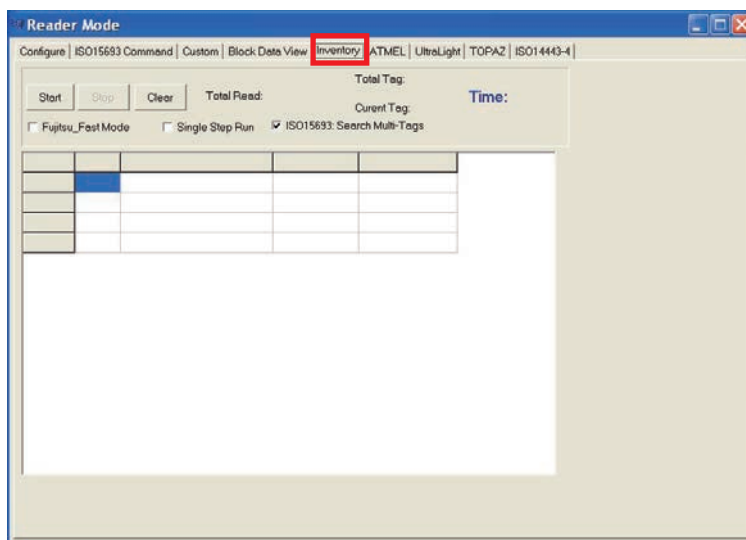

7. You may use a RFID tag to do the demo test.



8. Then, click “**Start**.” Information, like **UID No**, **Read Count**, **Protol** will be listed in the inventory, plus second number on the right side.

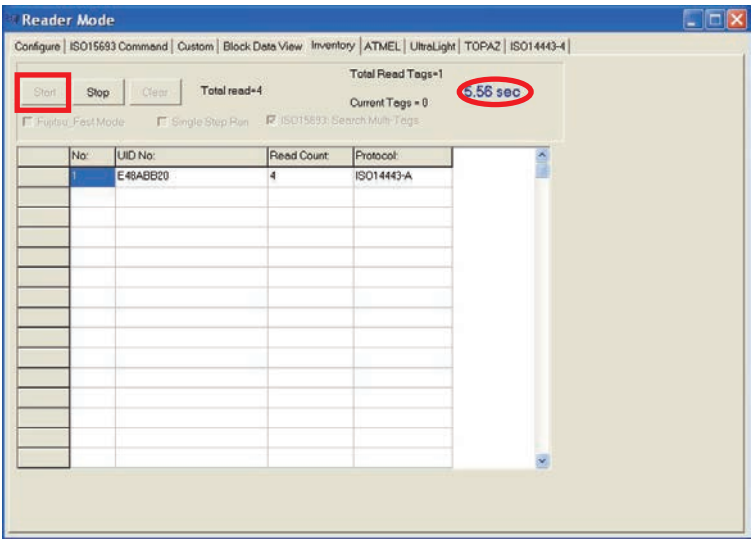

Chapter 3

BIOS

3.1 BIOS Main Setup

The AMI BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS RAM of the system stores the Setup utility and configurations.

When you turn on the computer, the AMI BIOS is immediately activated. To enter the BIOS SETUP UTILITY, press “**Delete**” once the power is turned on.

When the computer is shut down, the battery on the motherboard supplies the power for BIOS RAM.

The **Main Setup** screen lists the following information

System Overview

BIOS Version: displays the current version information of the BIOS


Build Date: the date that the BIOS version was made/updated

Processor (auto-detected if installed)

Speed: displays the processor speed

System Memory (auto-detected if installed)

Size: lists the memory size information

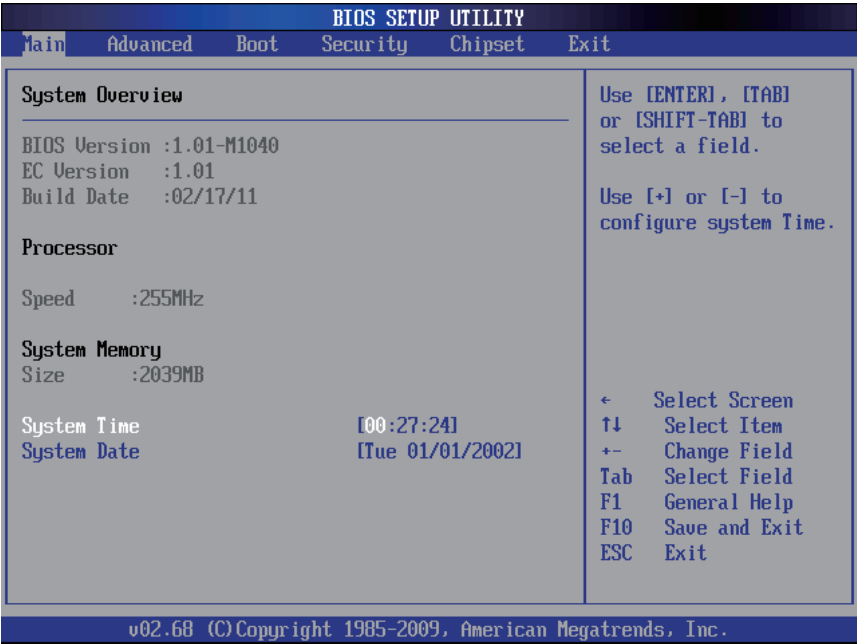

Key Commands

BIOS Setup Utility is mainly a key-based navigation interface. Please refer to the following key command instructions for navigation process.

“←” “→”	Move to highlight a particular configuration screen from the top menu bar / Move to highlight items on the screen
“↓” “↑”	Move to highlight previous/next item
Enter	Select and access a setup item/field
Esc:	On the Main Menu – Quit the setup and not save changes into CMOS (a message screen will display and ask you to select “OK” or “Cancel” for exiting and discarding changes. Use “←” and “→” to select and press “Enter” to confirm) On the Sub Menu – Exit current page and return to main menu
Page Up / +	Increase the numeric value on a selected setup item / make change
Page Down -:	Decrease the numeric value on a selected setup item / make change
F1	Activate “General Help” screen
F10:	Save the changes that have been made in the setup and exit. (a message screen will display and ask you to select “OK” or “Cancel” for exiting and saving changes. Use “←” and “→” to select and press “Enter” to confirm)

System Time

Set the system time.

The time format is:

Hour : 00 to 23

Minute : 00 to 59

Second : 00 to 59

System Date

Set the system date. Note that the ‘Day’ automatically changes when you set the date.

The date format is:

Day : Sun to Sat


Month : 1 to 12

Date : 1 to 31

Year : 1999 to 2099


3.2 Advanced Settings

The “Advanced” setting page provides you the options to configure the details of your hardware, such as CPU, IDE, ACPI, PCI Express, Trusted Computing and USB.

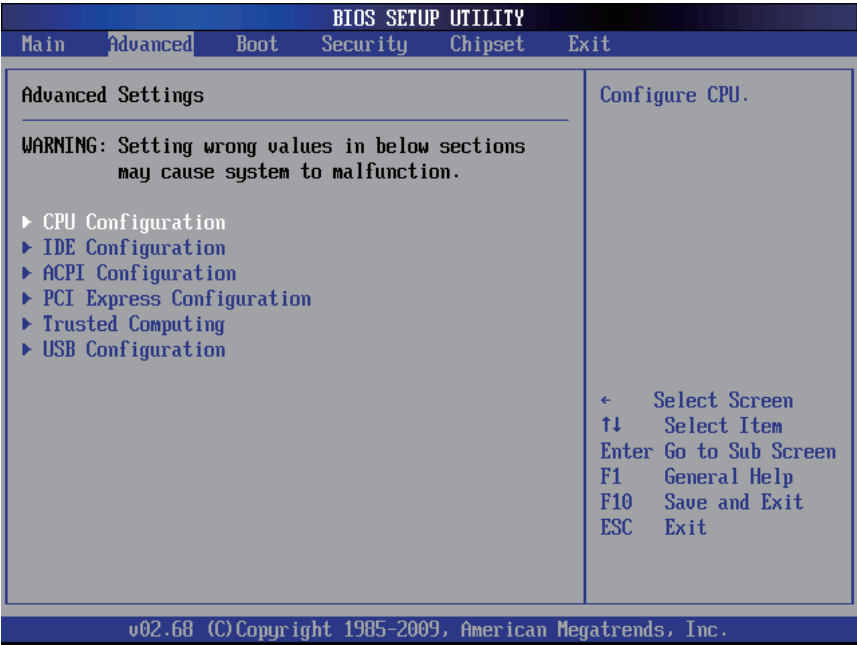

Note: please pay attention to the “WARNING” part at the left frame before you decide to configure any setting of an item.

3.2.1 CPU Configuration

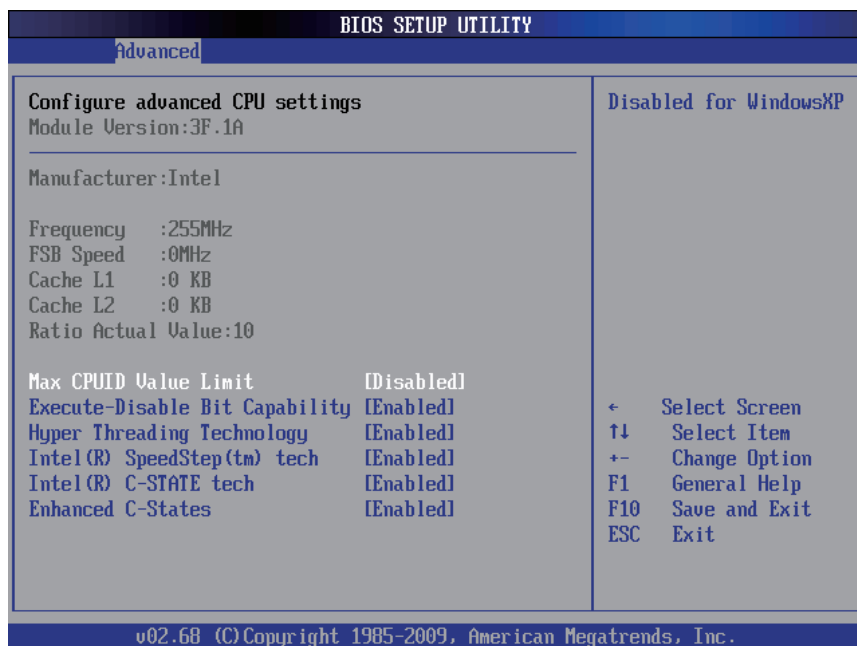

CPU Details

Manufacturer: shows the name of the CPU manufacturer

Frequency: indicates the processor speed

FSB Speed: the data flow speed of FSB (Front Side Bus)

Cache L1: shows the Cache L1 size for the CPU

Cache L2: shows the Cache L2 size for the CPU

Ratio Actual Value: actual value of clock ratio for the CPU

Hyper-Threading Technology

Enabled: activates the Hyper-Threading Technology for higher CPU threading speed. (Recommended)


Disabled: Deactivates the Hyper-Threading Technology.

Intel® SpeedStep™ Tech

Enabled: Enable GV3.

Disabled: Disable GV3.

3.2.2 IDE Configuration

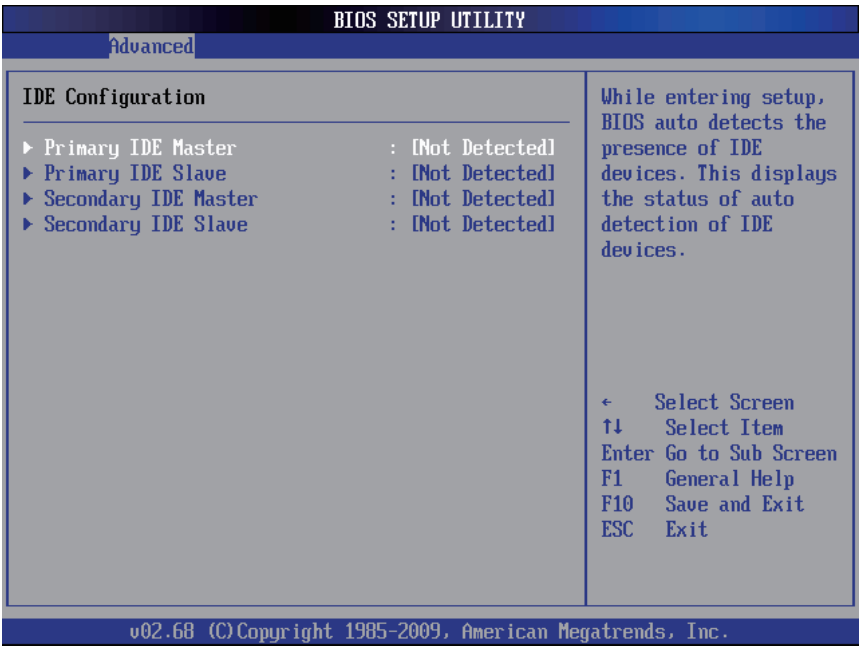

Primary IDE Master


Select the item to configure it. Press <Enter> to access its the sub menu.

Note: When entering the setup, BIOS automatically detects the presence of IDE devices. This page shows the status of auto-detected IDE devices.


Primary/Secondary IDE Master/Slave

The BIOS Setup displays all the available, connected IDE devices as well as the IDE status. You may enter a specific IDE device to do particular configurations. Press "Enter" to access the submenu of an IDE device on the list.

3.2.3 ACPI Settings

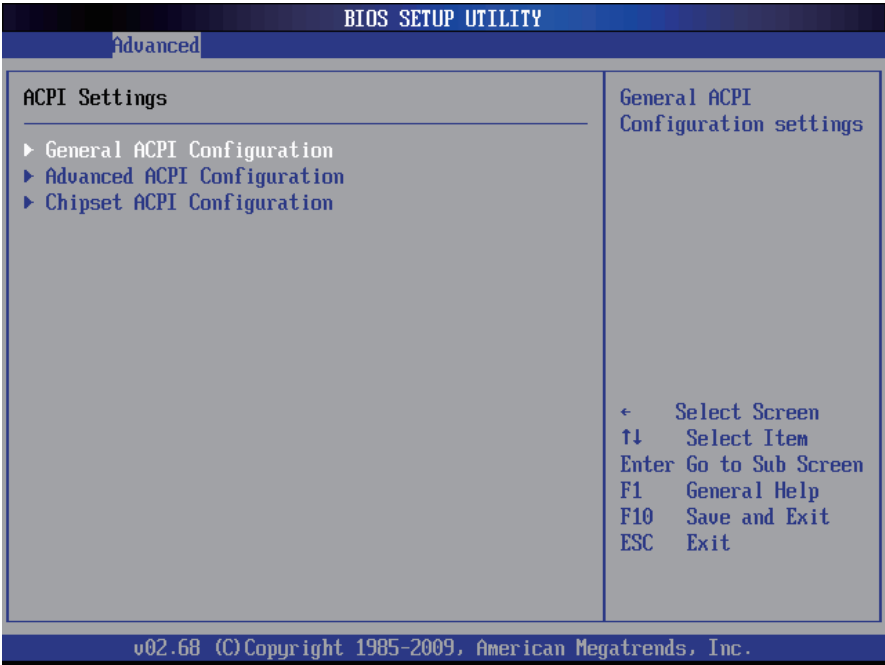

General ACPI Configuration

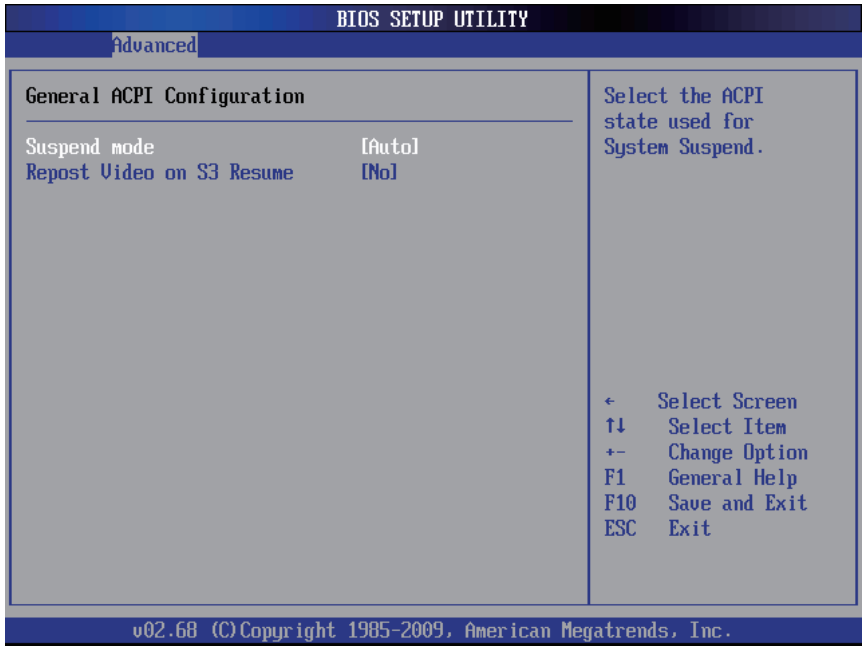


Suspend Mode

Select the ACPI state used for System Suspend.

Repost Video on S3 Resume

This item is used to set whether to Repost Video on S3 Resume.

Advanced ACPI Configuration

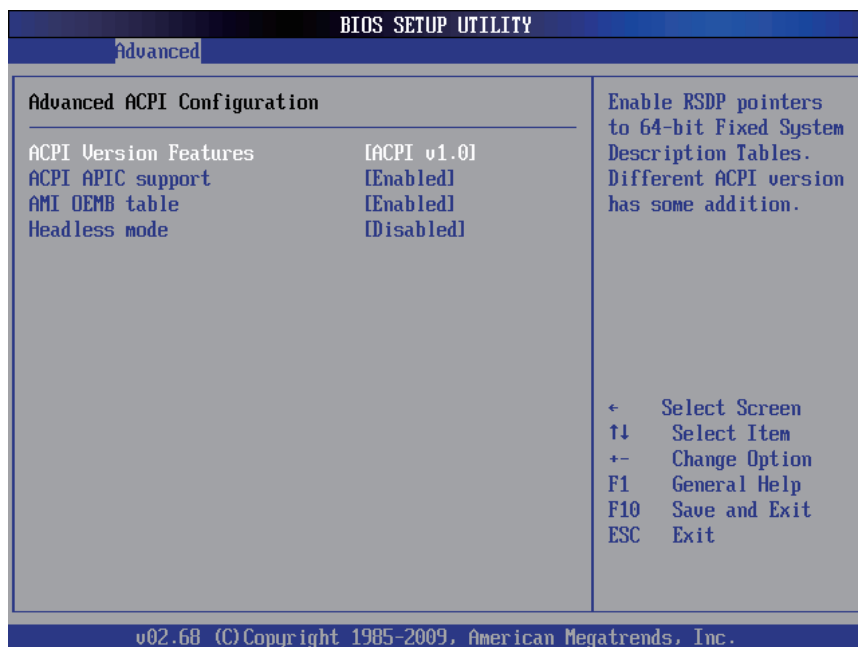

Enable ACPI Auto Configuration

This item allows you to enable/disable ACPI (Advanced Configuration and Power Interface) Auto Configuration. Setting: Disabled (Default), Enabled.

ACPI Version Features

Enable RSDP pointers to 64-bit Fixed System Description Tables. Different ACPI version has some addition.

ACPI APIC Support

Enable/Disable ACPI APIC Support.


AMI OEMB Table

Enable/Disable OEMB Table. Set this value to allow the ACPI BIOS to add a pointer to an OEMB table in the RSDT (Root System Description Table) table.

Headless Mode

Enable/Disable Headless Mode.

South Bridge ACPI Configuration

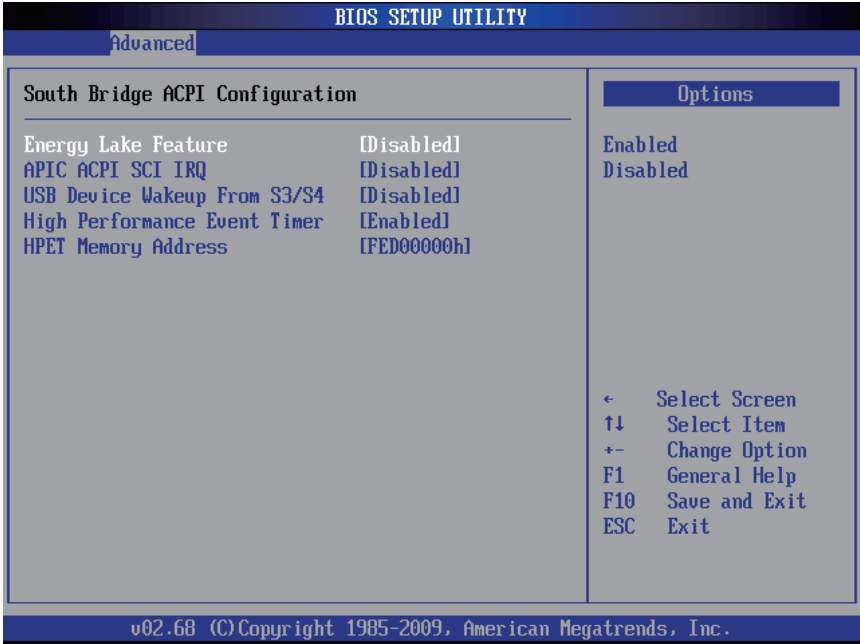

Energy Lake Feature

Allow you to configure Intel's. Energy Lake Power Management Technology.

APIC ACPI SCI IRQ

Enable/Disable APIC ACPI SCI IRQ.

USB Device Wakeup From S3/S1

Enable/Disable USB Device Wakeup From S3/1 Function.


High Performance Event Timer

Enable/Disable High Performance Event Timer.

HPET Memory Address

HPET (High Precision Event Timer) Memory Address.

3.2.4 PCI Express Configuration

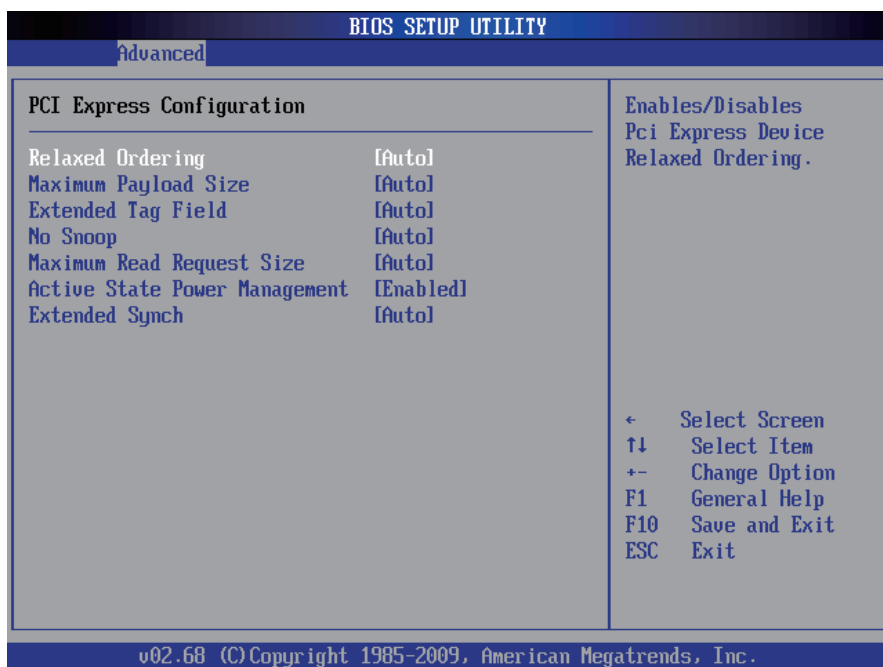

Relaxed Ordering

Enable/Disable PCI Express Device Relaxed Ordering.

Maximum Payload Size

Choose PCI Express Packet Payload Size.

Extended Tag Field

Enable/Disable PCI Express Device Extended Tag Field.

No Snoop

Enable/Disable PCI Express Device No Snoop.

Maximum Read Request Size

Set Maximum Read Request Size.


Active State Power Management

Enable/Disable PCI Express ASPM (Device Active State Power Management).

Extended Synch

Enable/Disable Extended Synch.

3.2.5 Trusted Computing

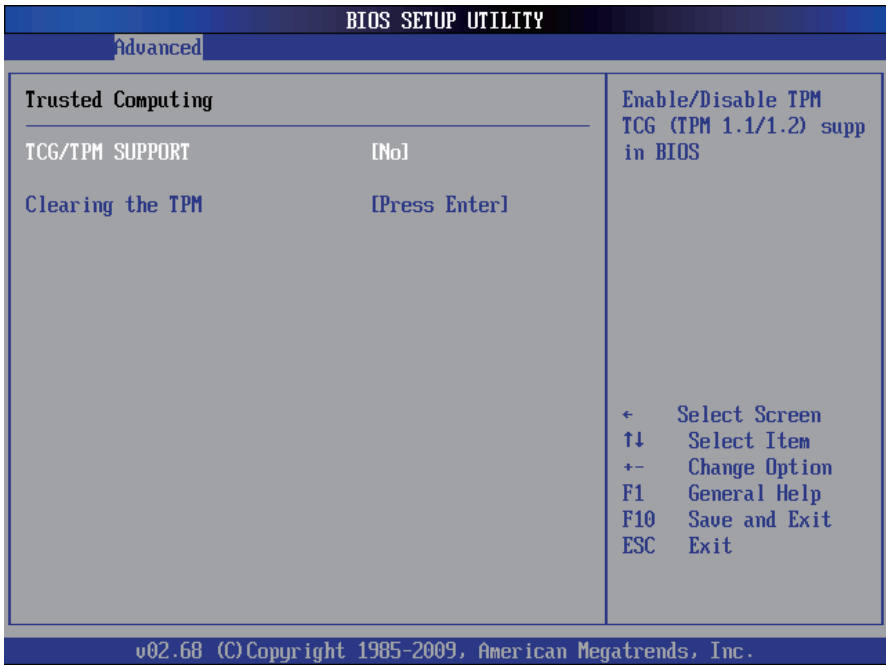

TCG/TPM Support


TCG (Trusted Computing Group)

Enable/Disable TPM TCG (TPM 1.1/1.2) Support in BIOS.

Clearing the TPM

Clearing the Trusted Platform Module (TPM) resets the TPM to an unowned state. This is used to remove the user information stored in TPM.

3.2.6 USB Configuration

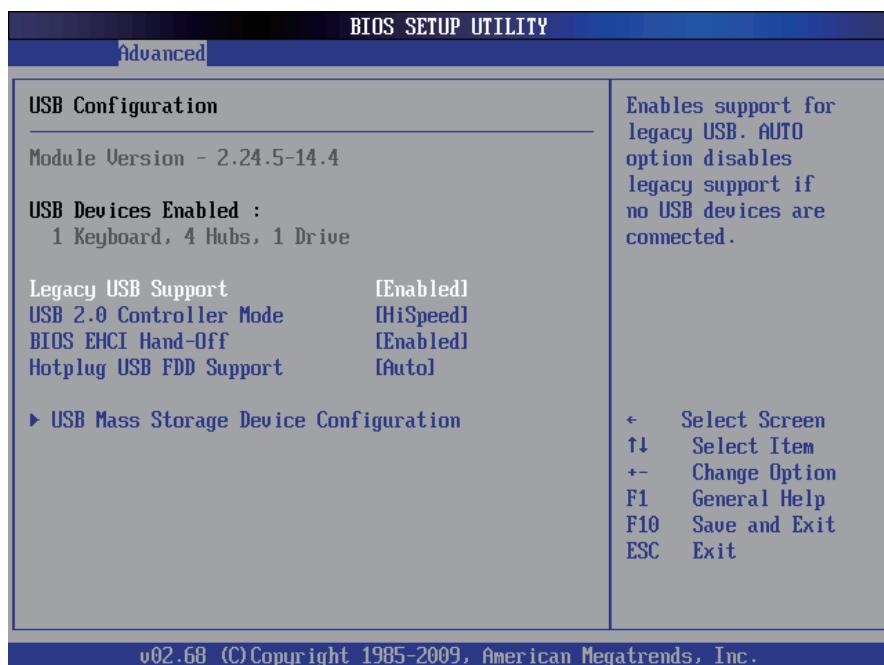

Legacy USB Support

Enables support for legacy USB. AUTO option disables legacy support if no USB devices are connected.

USB 2.0 Controller Mode

Configures the USB 2.0 controller in High Speed (480Mbps) or Full Speed (12MBPS).

BIOS EHCI Hand-Off


Allows you to enable the support for OS without an EHCI hand-off feature. Configuration options: [Disabled] [Enabled]

Do not disable the BIOS EHCI Hand-O

Hotplug USB FDD Support

Allows you to enable or disable the support for a USB floppy disk drive.

USB Mass Storage Device Configuration

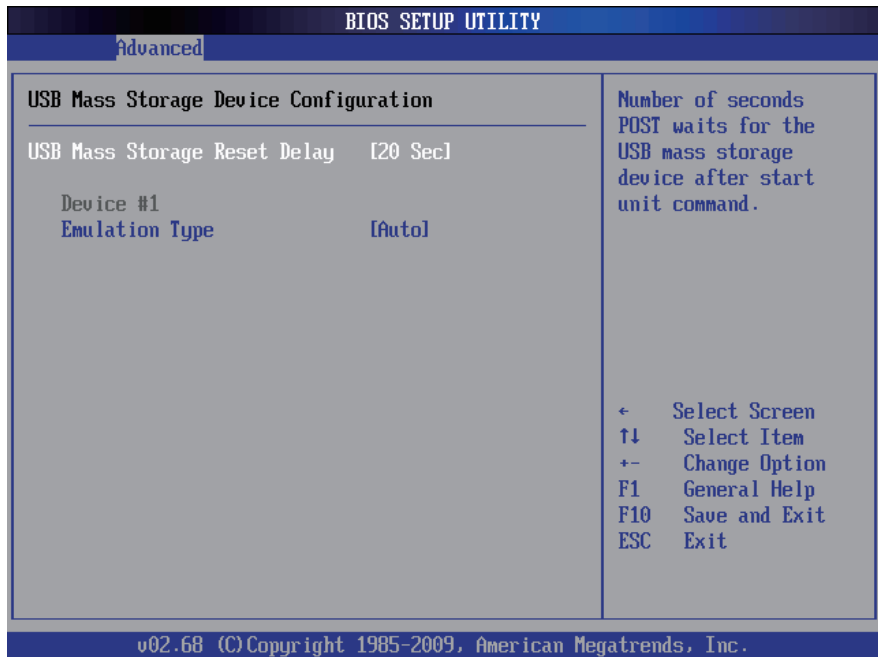

USB Mass Storage Reset Delay


Number of seconds POST waits for the USB mass storage device after start unit command.

Emulation Type


This item determines if the USB flash drive should be treated as a floppy disk drive or a hard drive. When set to Auto, USB flash drives that are less than 530 MB in size are automatically emulated as floppy disk drives. USB flash drives larger than 530 MB in size will be treated like hard disk drives.

3.3 Boot Settings

Set your device booting preferences.

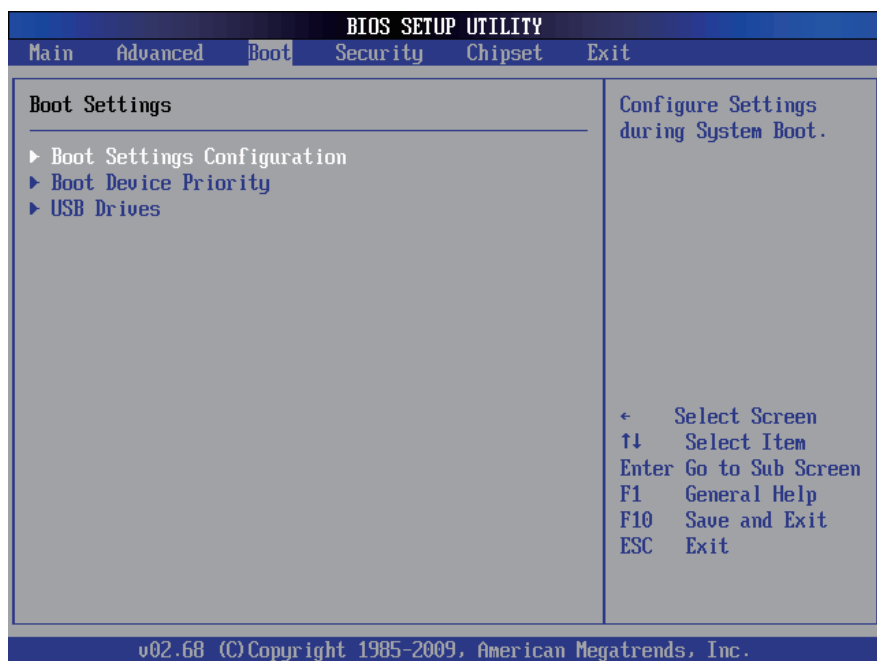

3.3.1 Boot Settings Configuration

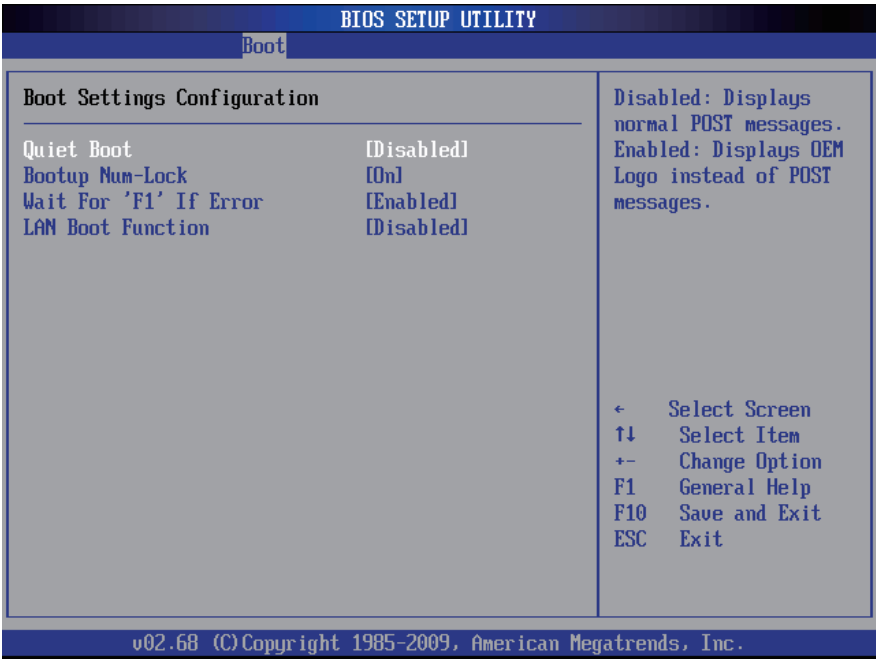

Quiet Boot

This setting determines if the BIOS should hide the normal POST messages with the motherboard or system manufacture's full-screen logo. When it is enabled, the BIOS will display the full-screen logo during the boot-up sequence, hiding normal POST messages. When it is disabled, the BIOS will display the normal POST messages instead of the full-screen logo.

Bootup Num-Lock

This setting determines whether the Num Lock key should be activated at boot up.


Wait For "F1" If Error

This BIOS feature controls the system's response when an error is detected during the boot sequence.

LAN Boot Function


Enable/Disable LAN Boot Function.

3.3.2 Boot Device Priority

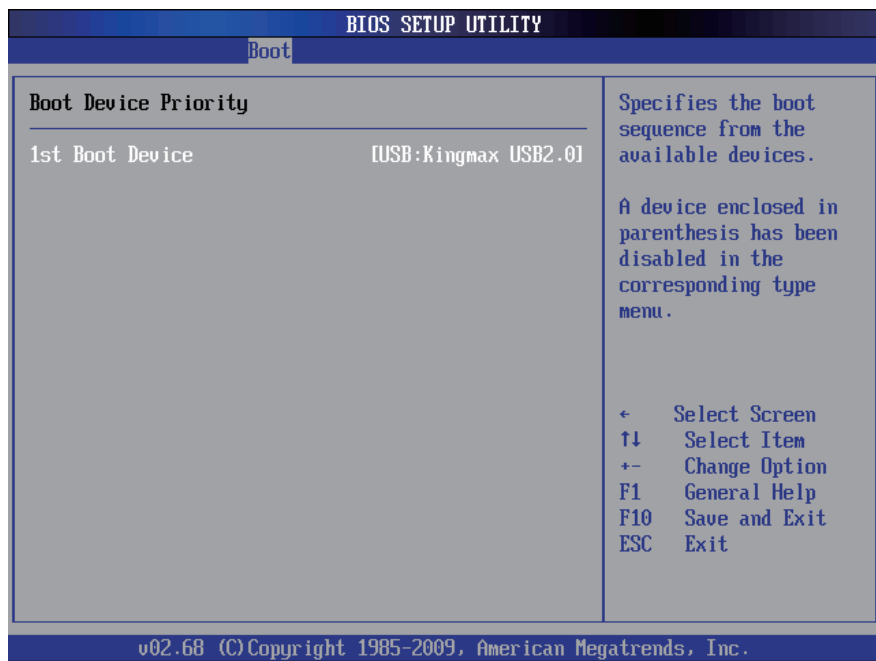


This setting determines the sequence that the BIOS uses to look for a boot device from which to load the operating system during the DOS boot process.

USB Drives

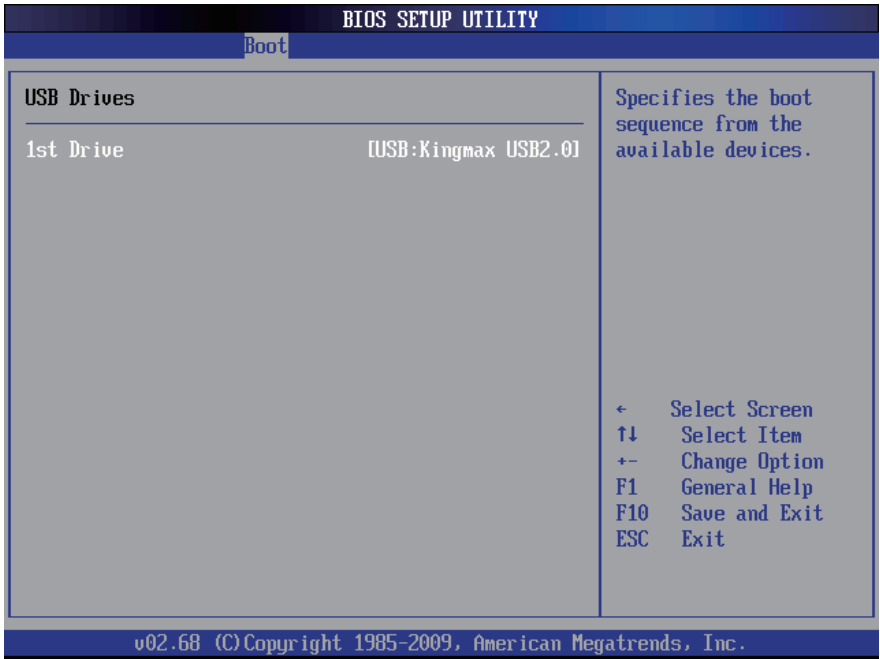

This function displays the information of USB Drives detected. This setting determines the boot sequence from the available devices.

3.4 Security

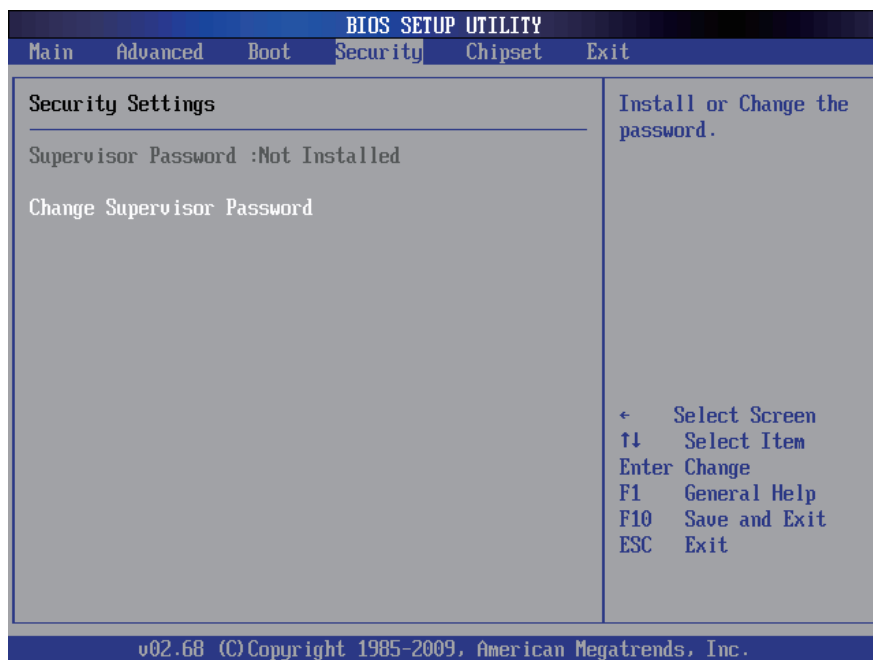

Supervisor Password

Set **Change Supervisor Password** to enter and change the options of the setup menus. When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Enter New Password:

Type the password, up to six characters in length, and press <Enter>. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press <Enter>. You may also press <ESC> to abort the selection and not enter a password.

With a password created, a Password Check item appears. Set this item to **Setup**, you will be prompted to enter the password every time you try to enter the BIOS Setup utility. This prevents an unauthorized person from changing any part of your system configuration.


You can also have the BIOS to request a password every time your system is rebooted by setting it to **Always**. This would prevent unauthorized use of your computer.

To clear the password, just leave the field blank and press <Enter> when you are prompted to enter a new password. Once the password is cleared, the following message will appear at the center of the screen.

Password Uninstalled.


3.5 Chipset Settings

On the “Chipset” screen, you can use the Up and Down buttons to select “North Bridge Configuration” or “South Bridge Configuration.”

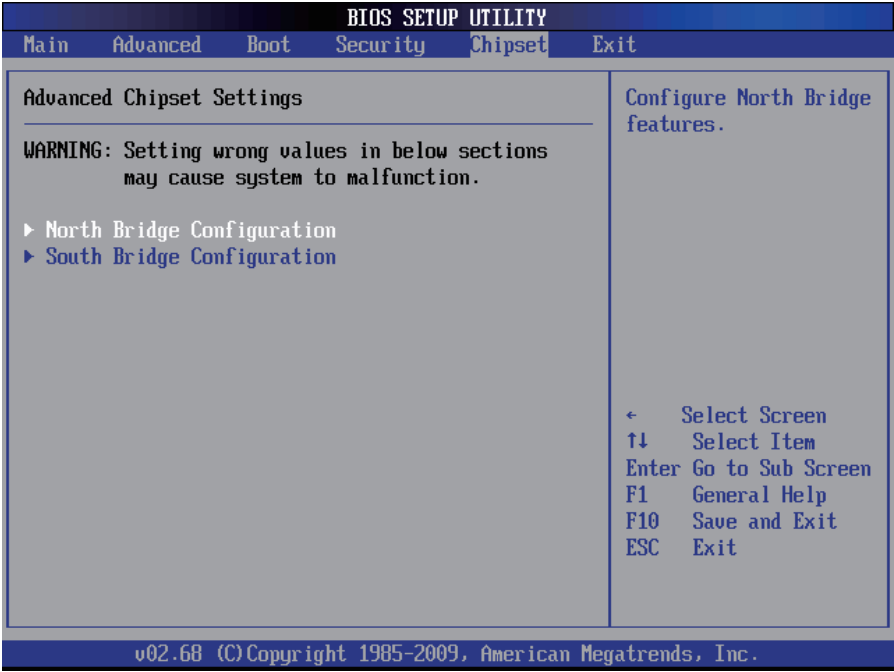

3.5.1 North Bridge Chipset Configuration

Memory, DRAM, and internal graphics can be configured on the “North Bridge Chipset Configuration” screen.

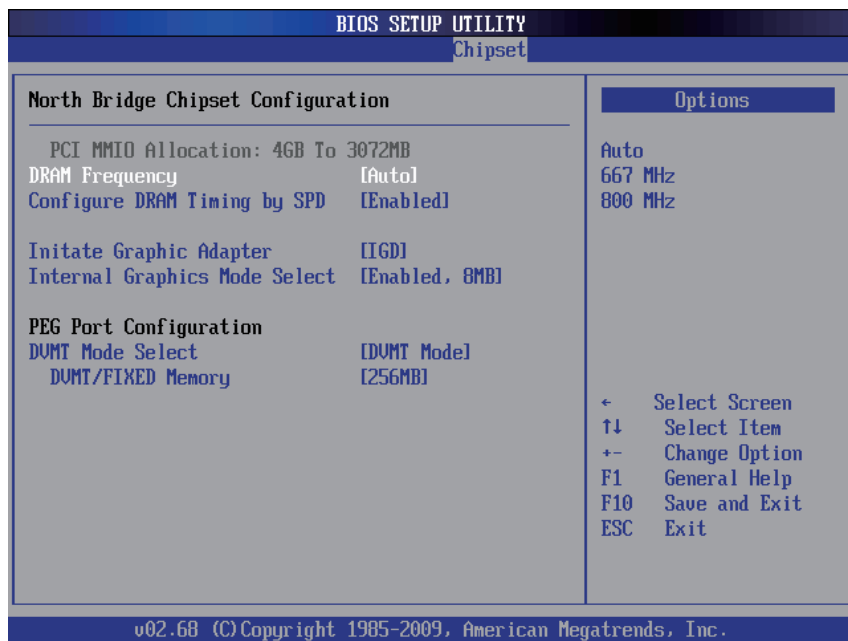

DRAM Frequency

Press “Enter” on it to select “Auto,” “400 MHz” or “500 MHz” for your DRAM frequency. The default is “Auto.”

Configure DRAM Timing by SPD

Press “Enter” on this option and then select “Enabled” or “Disabled.” The default is “Enabled.”

*SPD = Serial Presence Detect.

Initiate Graphic Adapter

This item allows you to select which graphics controller to use as the primary boot device.

Internal Graphics Mode-Select

Select “Disabled,” “Enabled, 1MB” or “Enabled, 8MB” to allocate the amount of memory for the internal graphic processor.

PEG Port Configuration

DVMT Mode Select


Options: “Fixed Mode,” “DVMT Mode” or “Combo Mode.”

DVMT/Fixed Memory

Allocates “64MB,” “128MB,” “256MB” or Maximum DVMT for DVMT/Fixed Memory.

3.5.2 South Bridge Chipset Configuration

USB, audio, or PCI-E settings can be configured on the “South Bridge Chipset Configuration” screen.

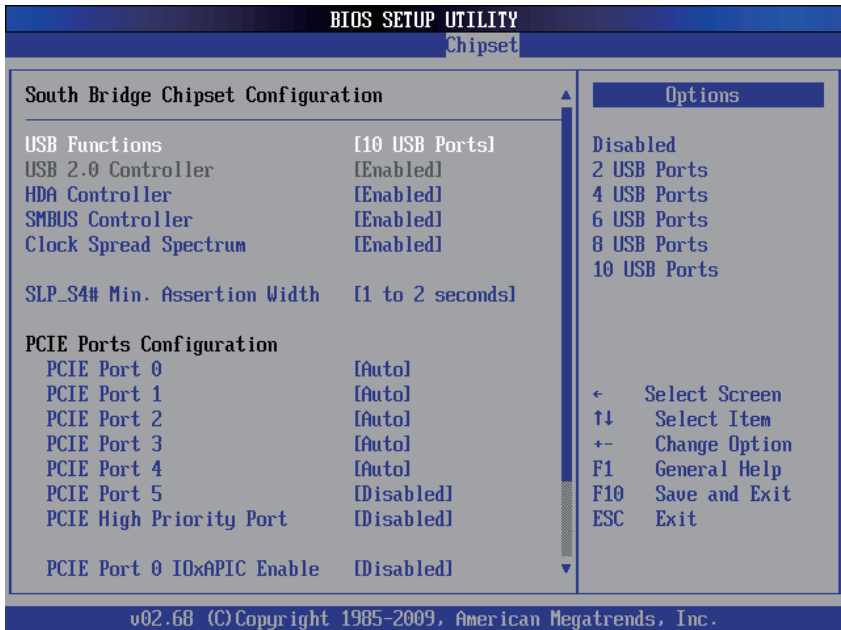

USB Functions

selects the number of USB ports to be enabled.

Options: "Disabled," "2 USB ports," "4 USB ports," "6 USB ports" and "8 USB ports."

USB 2.0 Controller

if your computer has USB 2.0 ports, please choose "Enabled" to activate the USB 2.0 ports. The default is "Enabled."

HDA Controller

Enable/Disable HDA Controller.

SMBUS Controller


Enable/Disable SMBus Controller help.

Clock Spread Spectrum Controller


Enable/Disable Clock Spread Spectrum Controller.

PCI-E Port Configuration

Select options for PCI-E ports: "Auto," "Enabled," "Disabled." The default is "Auto."

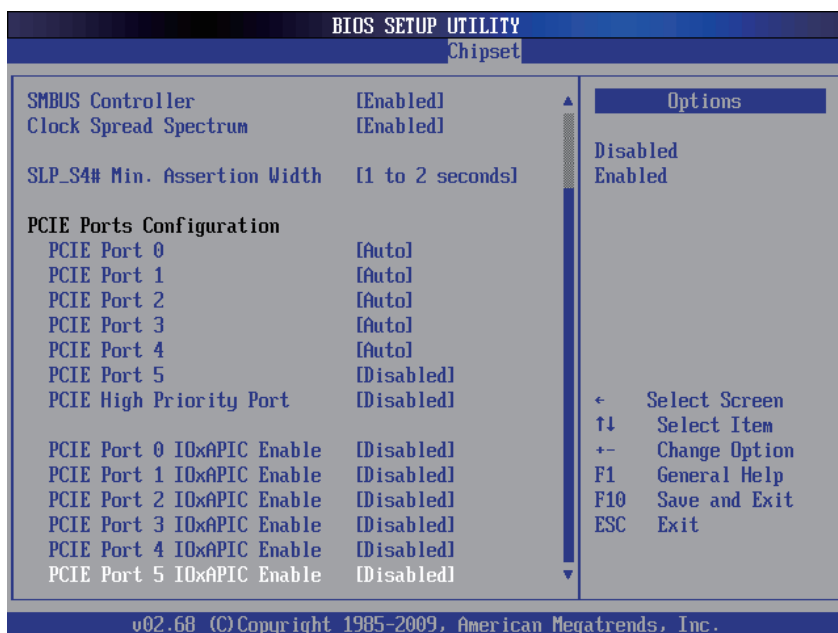

3.6 Exit Options

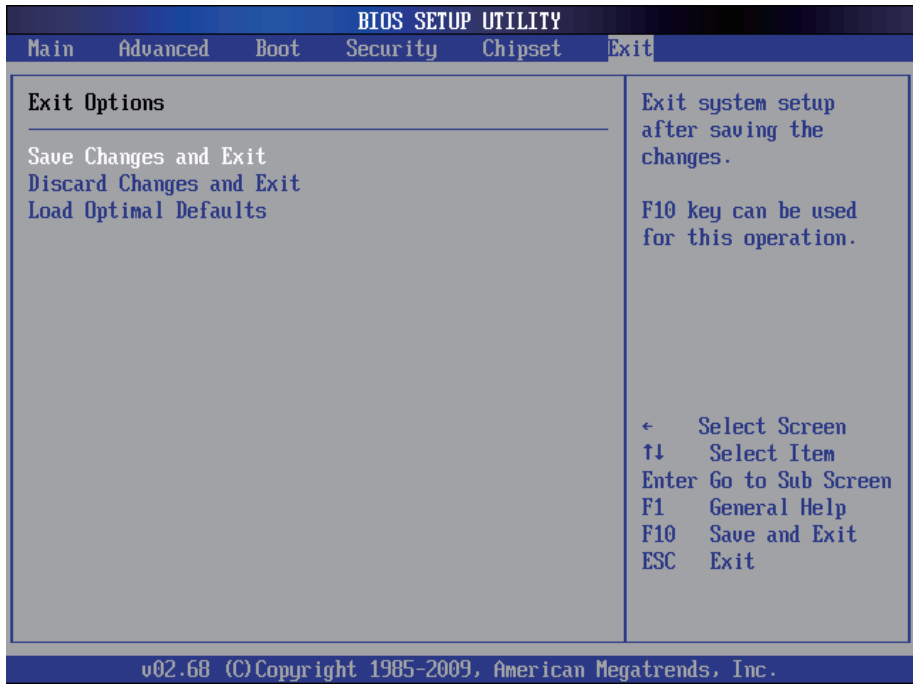

Save Changes and Exit

Pressing <Enter> on this item and it asks for confirmation:

Save configuration changes and exit setup?

Pressing <OK> stores the selection made in the menus in CMOS - a special section of memory that stays on after you turn your system off. The next time you boot your computer, the BIOS configures your system according to the Setup selections stored in CMOS. After saving the values the system is restarted again.

Discard Changes and Exit

Exit system setup without saving any changes.
<ESC> key can be used for this operation.

Load Optimal Defaults

When you press <Enter> on this item, you get a confirmation dialog box with a message:

Load Optimal Defaults?
[OK] [Cancel]

Pressing [OK] loads the BIOS Optimal Default values for all the setup configurations.

<F9> key can be used for this operation.

This page is intentionally left blank.